




FlipPhonePlus

Operator's Manual

Table of Contents

Overview of the phone	3
Safety Information	5
Quick Setup Guide.....	9
Keypad functions (Predictive text)	14
Phonebook/Calls	15
Messages.....	18
Call History	21
Alarm	22
Magnifier	23
FM Radio.....	24
Voice Memos	25
Camera.....	27
Organizer	29
Multimedia	32
SOS Settings.....	35
Settings	37
Troubleshooting and Support	45

 Overview of the phone

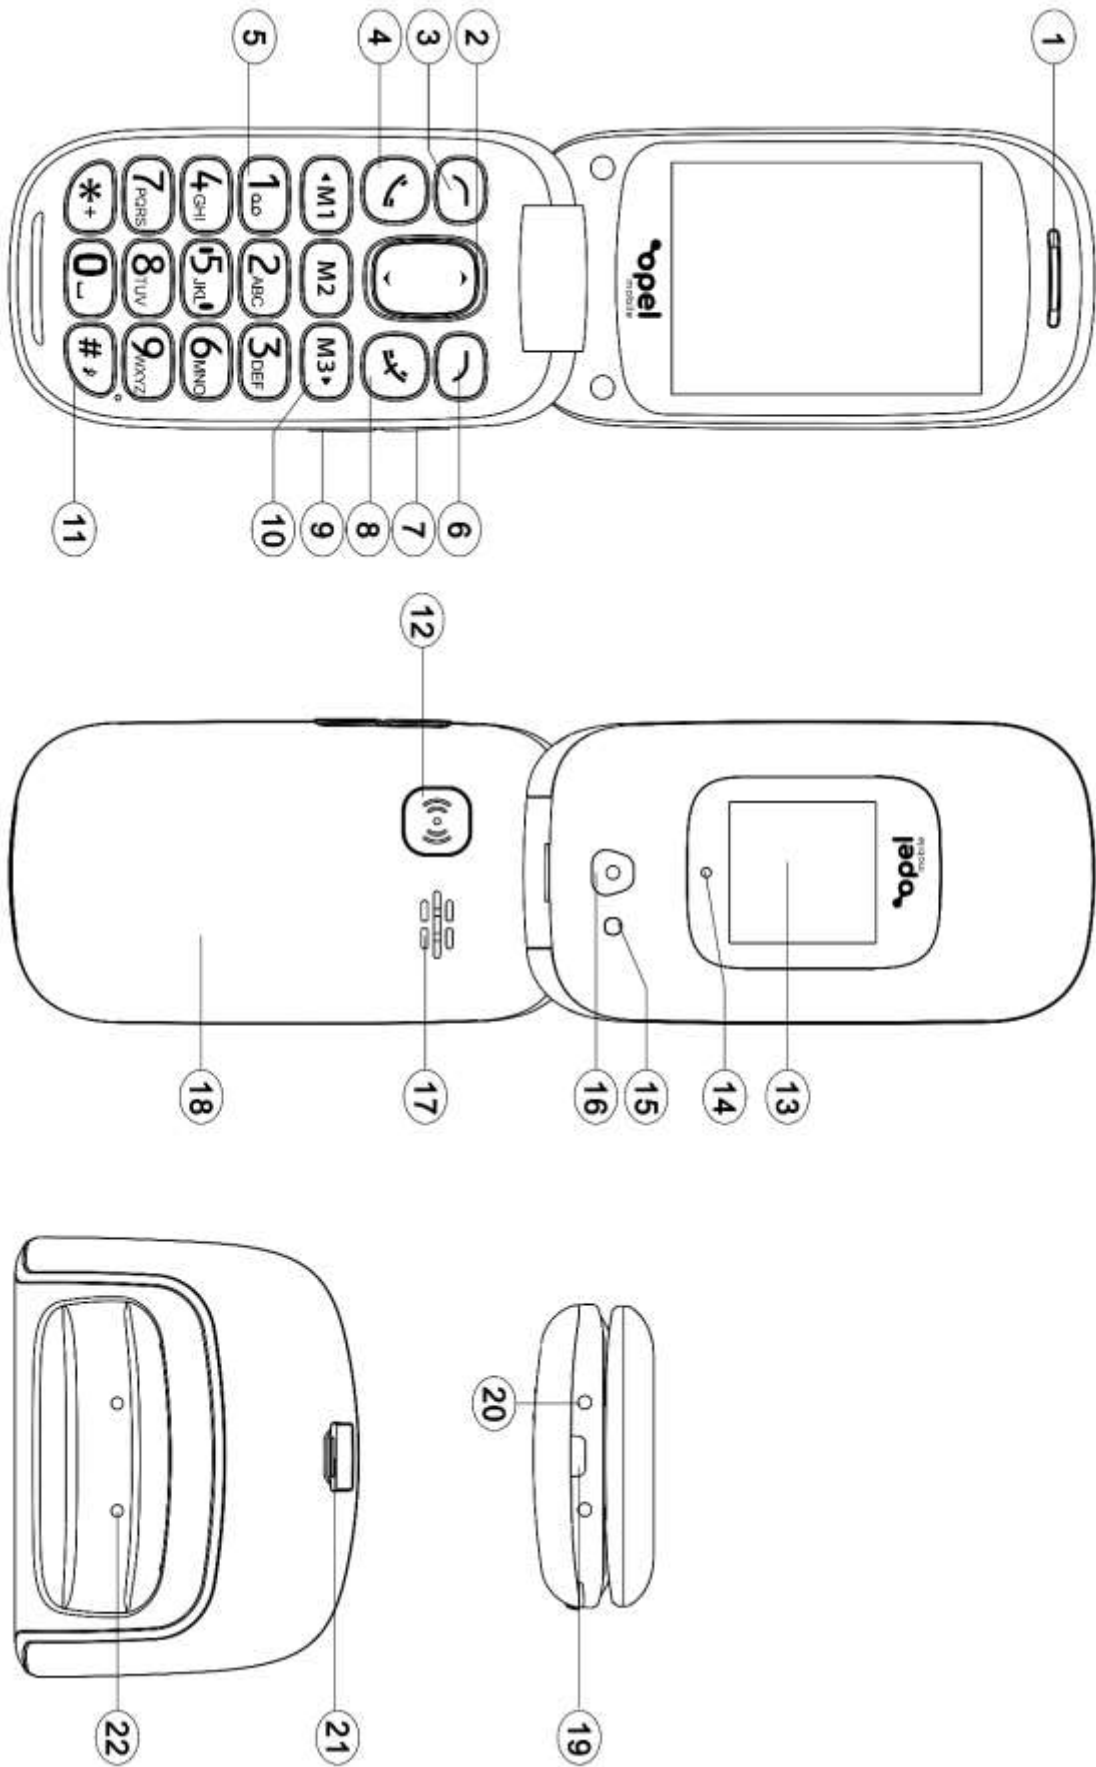

1. Earpiece	2. Up/Down Arrow keys
3. Left selection key	4. Call key
5. Voice mail	6. Right selection key
7. + Volume key/ Torch key (On/Off) Activate/Deactivate external display key	8. End call key/Power on/Power off
9. - Volume key Activate/Deactivate external display key	10. Speed dial keys:M1/M2/M3 M1 = Left arrow key, M3 = Right arrow key
11. Silent/Input method	12. SOS Key
13. External display (Photo of incoming call/Time/Missed calls/Missed message)	14. Red LED light (Missed calls/Missed message/Charging)
15. Torch light	16. Camera lens
17. Loudspeaker	18. Battery cover
19. USB charging socket	20. Charging Pins for Charging Dock
21/22. Charging Dock and Power Socket	

Safety Information

Read this entire manual carefully before you start using the device. This will take you a couple of minutes, but it will save you time later and will allow you to enjoy all the features on your device.

THIS MODEL MEETS INTERNATIONAL GUIDELINES FOR EXPOSURE TO RADIO WAVES

Your mobile device is a radio transmitter and receiver. It is designed not to exceed the limits for exposure to radio waves recommended by international guidelines. These guidelines were developed by the independent scientific organization ICNIRP and include safety margins designed to assure the protection of all persons, regardless of age and health.

The guidelines use a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit for mobile devices is 2 W/kg and the highest SAR value for this device when tested at the ear was 0.477 W/kg*. As mobile devices offer a range of functions, they can be used in other positions, such as on the body as described in this user guide**. In this case, the highest tested SAR value is 1.079 W/kg*.

As SAR is measured utilizing the devices highest transmitting power the actual SAR of this device while operating is typically below that indicated above. This is due to automatic changes to the power level of the device to ensure it only uses the minimum level required to reach the network.

The World Health Organization has stated that present scientific information does not indicate the need for any special precautions for the use of mobile devices. They note that if you want to reduce your exposure then you can do so by limiting the length of calls or using a 'hands-free' device to keep the mobile phone away from the head and body.

Additional Information can be found on the website of the World Health Organization

**The tests are carried out in accordance with international guidelines for testing.*

***For body worn operation, this phone has been tested and meets the RF exposure guidelines when used with the (manufacturer name) accessories supplied or designated for this product. Use of other accessories may not ensure compliance with RF exposure guidelines*

How to handle and preserve your device

- Trying to modify, disassemble or repair the device or the charger yourself will make the warranty invalid.
- Avoid **hitting or shaking your phone.**
- The warranty of this phone may be annulled if you use unauthorised accessories. To prevent this from happening and to keep your phone working properly use only the battery charger and Micro USB cable that **originally comes with the device.**

- Make sure the device does not get wet. To avoid possible, short-circuit, electric shock or corrosion keep your phone away from rain, water splash, sweat or moisture. You must not use your device with your hands wet or immerse it in water. In case it gets wet keep the phone OFF and do not try to use a microwave to dry it.
- This product should not be used in extremely hot, cold, dusty or humid spaces. It also should not be exposed to long periods of sunshine or strong magnetic fields.
- Avoid all heat sources, ovens or other appliances (including amplifiers) that produce heat or have hot surfaces.
- Excessive high-volume levels or noise may affect your hearing. To prevent this from happening use an adequate volume in your earphones when you are listening to music or enjoying any of the multimedia features of the phone.
- You are fully responsible for keeping your information backed up and we don't take any legal responsibility for data that is damaged or lost. It is possible to erase or interfere with the information stored in your phone by a magnetic device when using your phone. To avoid this from happening, keep your phone clear from magnetic devices.
- Pointing the torch into your own or another person's eyes will cause damage and may result in blindness.

Safety Recommendations while using your device

AIRCRAFT

Switch off your wireless device whenever you are instructed to do so by airport or airline staff.

If your device offers a 'flight mode' or similar feature consult airline staff as to its use in flight.

DRIVING

Full attention should always be given to driving and local laws and regulations restricting the use of wireless devices while driving must be observed.

HOSPITALS

Mobile phones should be switched off wherever you are requested to do so in hospitals, clinics or health care facilities. These requests are designed to prevent possible interference with sensitive medical equipment.

PETROL STATIONS

Obey all posted signs with respect to the use of wireless devices or other radio equipment in locations with flammable material and chemicals. Switch off your wireless device whenever you are instructed to do so by authorized staff.

INTERFERENCE

Care must be taken when using the phone near personal medical devices, such as pacemakers and hearing aids.

For Pacemakers

Pacemaker manufacturers recommend that a minimum separation of 15cm be maintained between a mobile phone and a pacemaker to avoid potential interference with the pacemaker. To achieve this, use the phone on the opposite ear to your pacemaker and do not carry it in a breast pocket.

For Hearing Aids:

Some digital wireless phones may interfere with some hearing aids. In the event of such interference, you may want to consult your hearing aid manufacturer to discuss alternatives.

For other Medical Devices: Please consult your physician/doctor and the device manufacturer to determine if operation of your phone may interfere with the operation of your medical device.

Safety recommendations for accessories

- Use only Opel Mobile accessories or chargers that came with this phone
- Be careful when handling the battery. The lithium-ion battery can be put into use immediately after being unpacked. Use only the Opel Mobile battery that came with the device. We recommend charging the battery as soon as possible once the phone has been switched on.
- Immediately stop using the battery charger if you smell an odour or overheats or a crack appears in the casing.
- In case you notice the cable, or the plug have suffered any damage, discontinue using it and contact sales support line as soon as possible for advice.
- The memory card should be protected from strong shocks and static electricity. Handle with care.

Usage conditions and restrictions

- All packaging materials, especially plastic ones, must be disposed of properly. The lack of this procedure may cause a suffocation danger to children. Any packaging must be kept out of children's reach.
- This device is not a toy and not designed for children and strict adult supervision must always be adhered to. Keep the phone and accessories beyond children's reach.

 
- This device can be recycled. To dispose of this device properly remember to follow local regulations. Local authorities may guide you on finding appropriate facilities to this end. The battery must never be disposed of in a fire.
- If this phone is lost or has been stolen please notify your network service provider as soon as possible and ask for the SIM card to be deactivated
- You are fully responsible for any damage caused by not following these instructions or for improper use of the device. We do not accept any liability for any improper use or mishandling on this device.

Quick Setup Guide


Installing the SIM card

This Phone requires a Standard Size SIM Card which is the largest of the 3 sim cards available. If you don't have a standard size sim card, please contact your sim card provider to receive a standard size sim card.


1. Remove the back Cover by lifting from the bottom left hand corner first then remove completely.

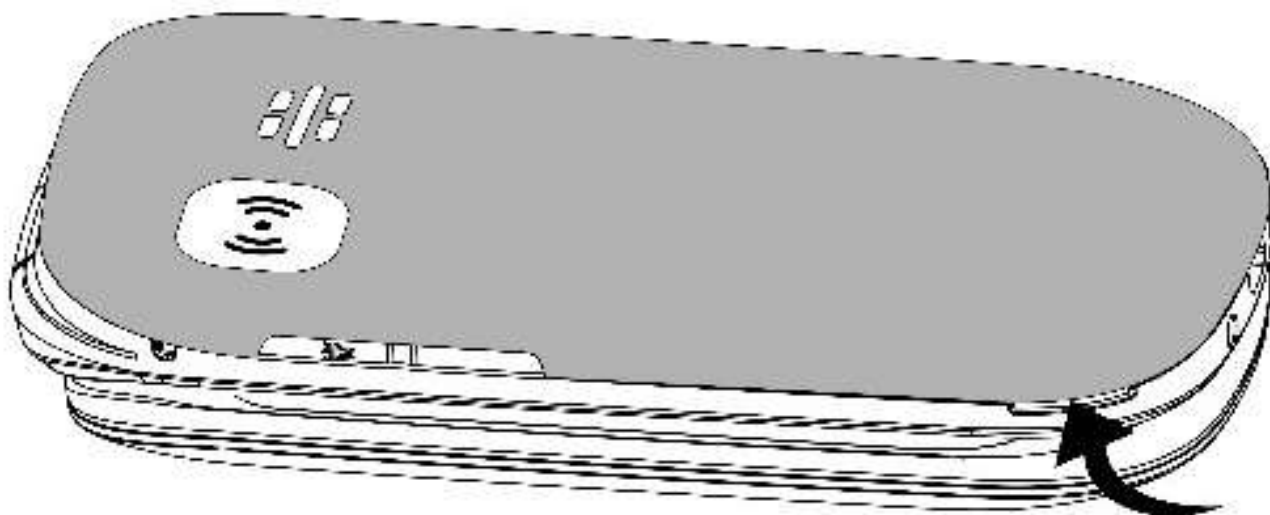

 2. Remove the battery by lifting from the top first then pulling out.

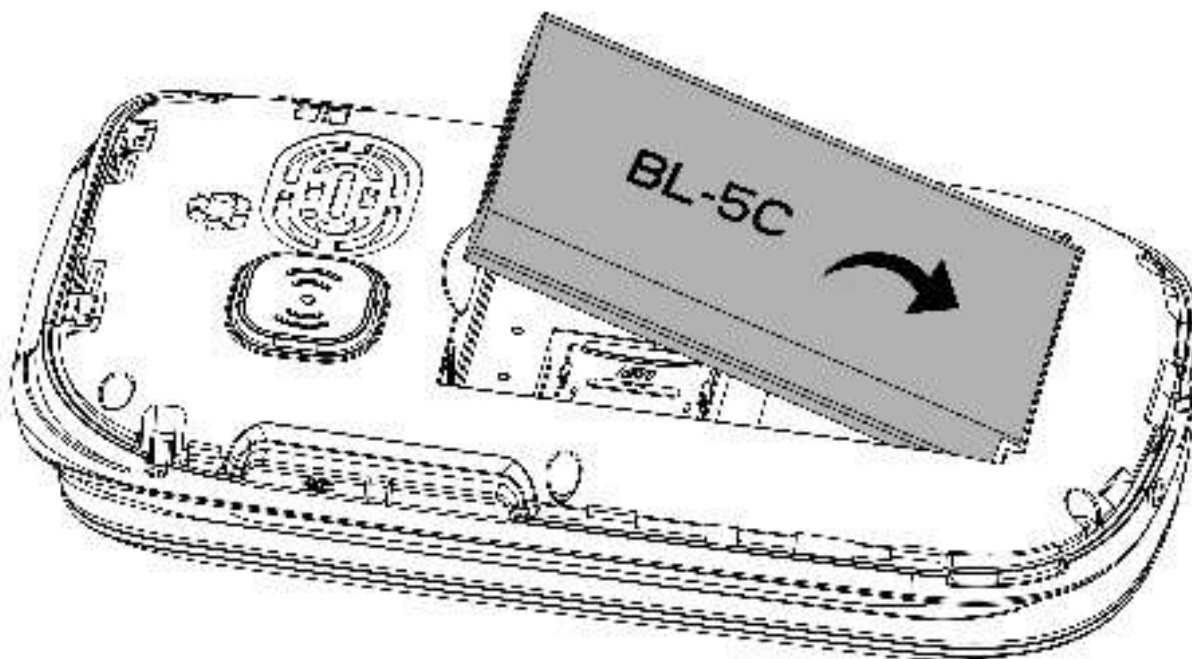

 
3. Insert your standard size sim card, ensure the gold contacts are facing downwards and the cornered edge is in the top left-hand corner. Slide your sim card in place until it doesn't go in any further.

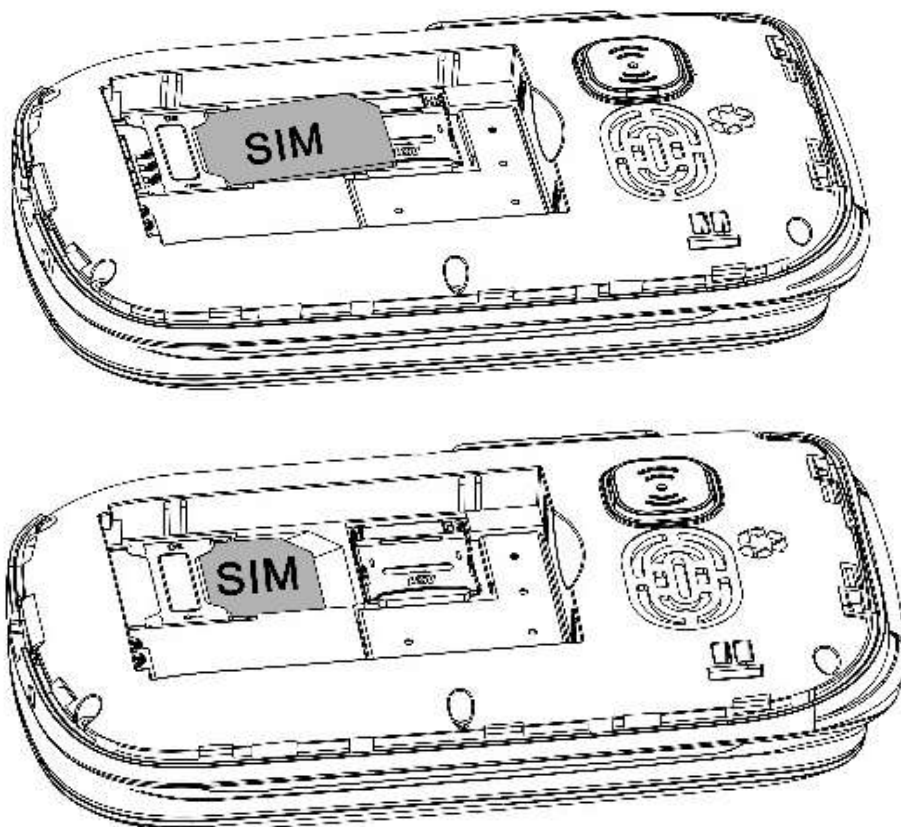


Installing T-FLASH memory card (Optional accessory not included)

The T-Flash card is used as additional phone storage. When you connect to a computer via a USB cable, you can copy Music, Picture or Photos.

 
1. Lift the T-FLASH card memory slot by sliding the silver plate to the right and lifting up carefully to ensure you don't bend or break it.

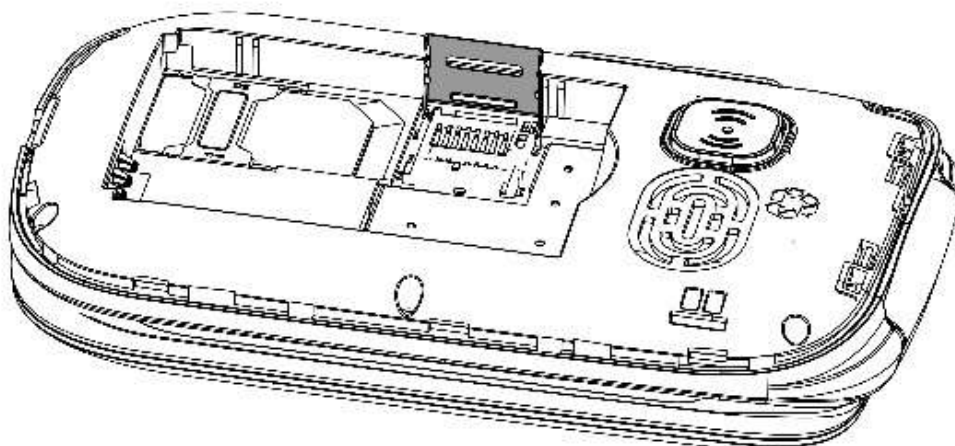

 2. Insert the T-FLASH card making sure the gold contacts are facing downwards.


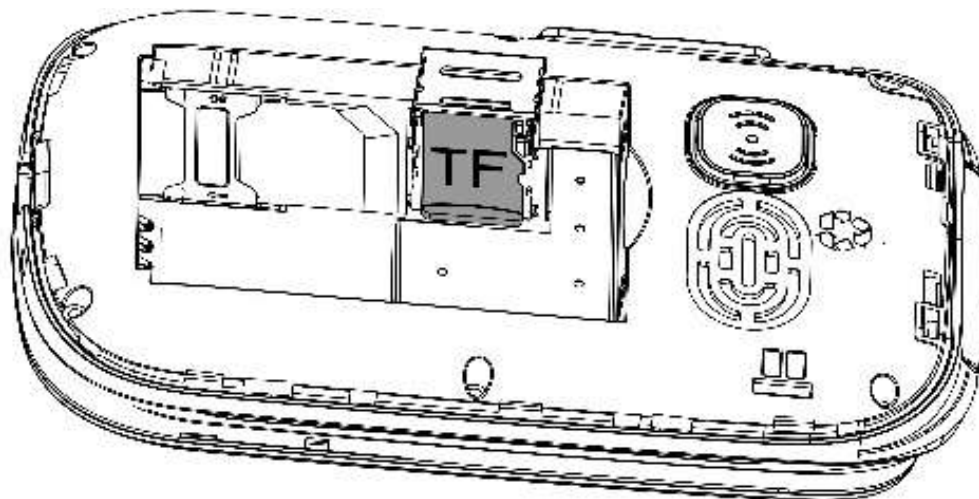


 3. Then push the silver cover back down and slide to the left to lock it back into place.

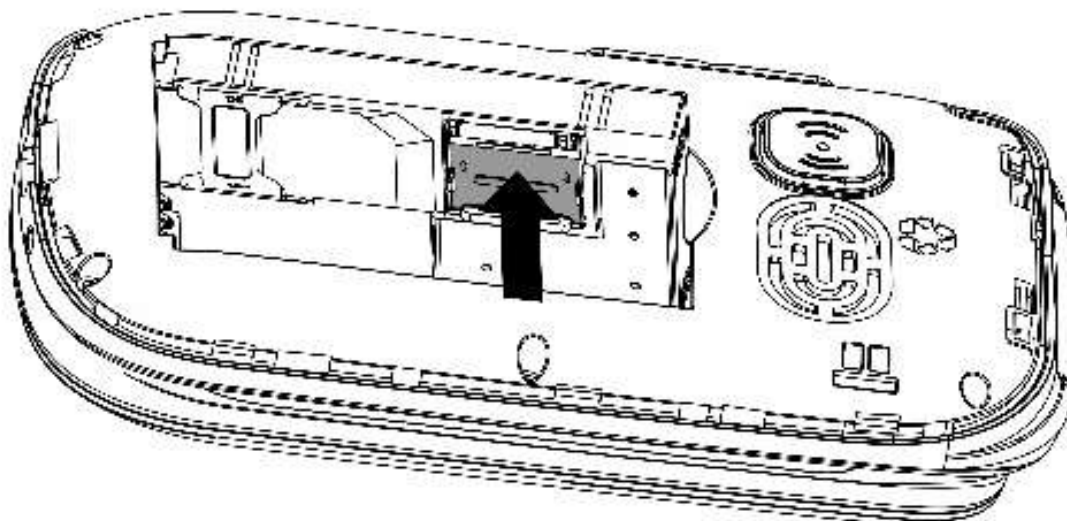

Installing the battery

  1. Insert the battery by aligning the gold battery contacts with the phones 3 gold pins. Slide into place and push down to insert the battery

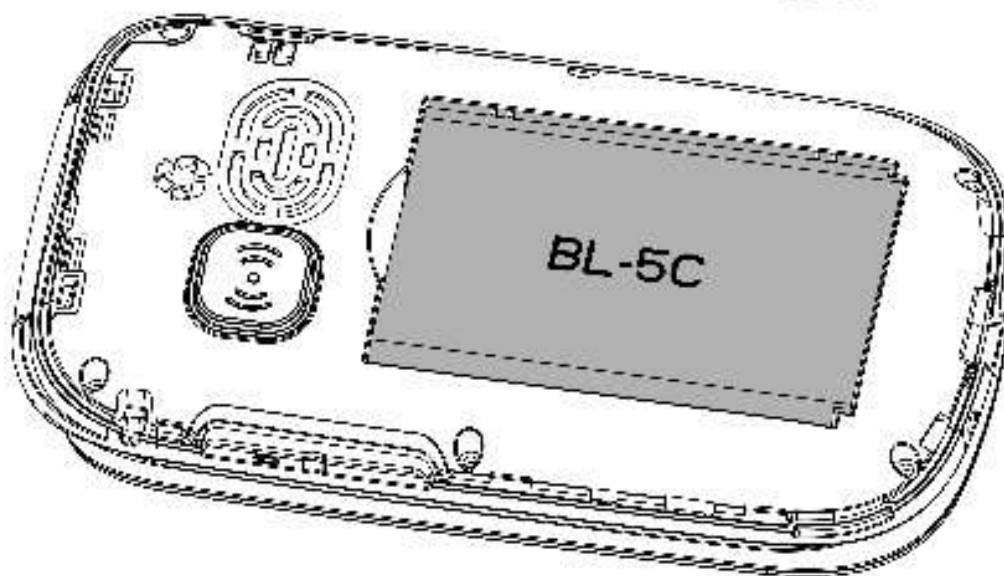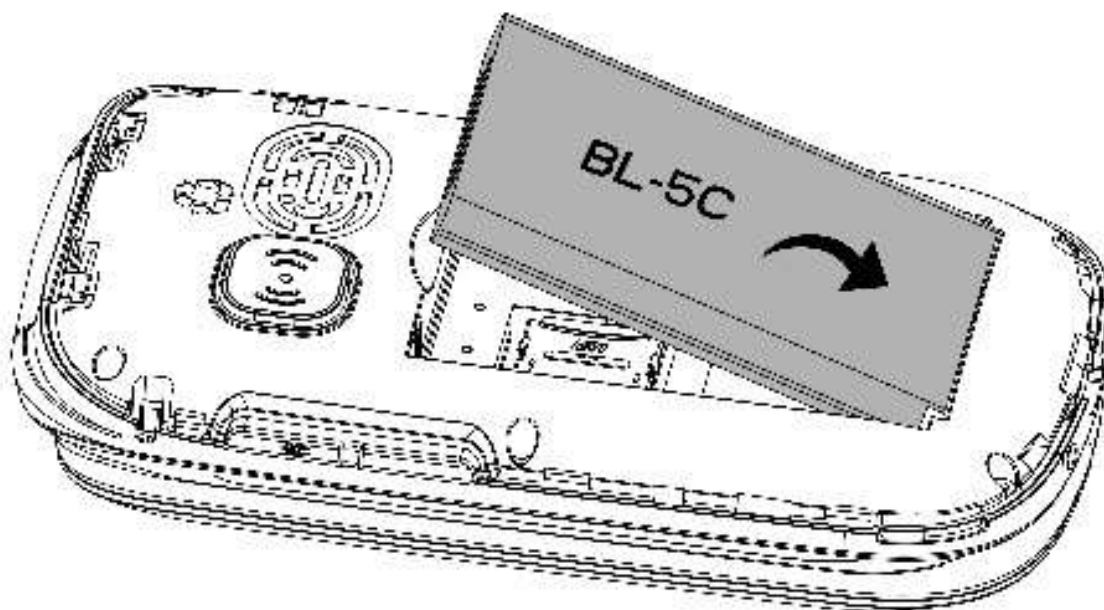

Charging the Phone

1. To charge your phone, insert the power adaptor into the wall.
2. Then insert the Micro USB into the phones charging socket or insert into the charging cradles charging socket and insert the phone into the charging dock
3. Turn the power on from your walls power.
4. We recommend charging the battery for at least 4 hrs before your first use.

*Please note if your battery goes completely flat, you will need to charge it for at least 10 minutes before the phone will turn on again.

Turning the phone on and off

1. To turn the phone on, flip open the phone and hold down the RED end call/power button key for at least 3 seconds.
2. To turn the phone off, hold down the RED end call/power button for 3 seconds. Then click yes using the left selection key.

 

Turning the phone on for the first time

1. Choose your preferred Language, by scrolling up and down using the up/down arrow keys. Then using the left selection key choose which language you would prefer.
2. If your sim card is already installed it will automatically choose the correct date and time where you are currently located.

Keypad functions (Predictive text)

This phone uses predictive text to help you type in names and words quicker and easier. This function is available when adding new contacts and text messaging. (Please note this function is not available for searching contacts, the normal keypad function is available by tapping on each keypad number until you have the letter you want)


 
 
Typing Words

1. When typing in words or names using the keypad simply press the letter on the keypad you wish to select.
2. For Example - you want to type "hello"
3. Click on 4GHI, 3DEF, 5JKL, 5JKL ,6MNO once.
4. The word hello will appear. By simply pressing the "0" space key it will select the word that is highlighted.
5. There may be other words that match this selection. By pressing the Left  and Right  arrow keys you can scroll through the list of words available, once the word is highlighted you can press the "0" space key or press the left selection key.

Typing Numbers

1. To type in numbers simply press the # hash key until the selection of 123 numbers appears either in the top left-hand corner when typing messages or in the box located to the right when typing in new contacts.
2. Then using the keypad type in the numbers, you want to select.

Typing symbols

1. To type Symbols like a dot or comma. Click the Star key. This will bring up the menu to choose which symbol you wish to use. By using the Up/Down  arrow keys and the left  and right  arrow keys, you can scroll through the symbols available. Simply press the left selection key to choose the symbol you wish to use when highlighted.

If you don't wish to use the predictive text feature, you can simply press the hash key until it selects the normal keypad function which shows either ABC or abc. This will need to be done each time you wish to type a message.

To revert to using predictive text simply press the hash key until the symbol sABC or sabc appears.

Phonebook/Calls

Adding new contacts

1. Click on menu using the left selection key and scrolling through using the up/down arrow keys, select phonebook by pressing the left selection key on Phonebook.
2. (Alternatively, you can click on the right selection key to select names to open the phonebook contact lists)
3. Scroll up using the up/down arrow keys and select "Add new contact" using the left selection key.
4. Then select where you want to save this contact "SIM" or "Phone" by scrolling up or down using the up/down arrow keys, then selecting option using the left selection key.
5. Type in their name by using the keypad.
6. Then press the down key and type in their phone number using the keypad.
7. Then using the left selection key, click options then click Save.

Adding Photo Contacts

1. Click on menu using the left selection key and scrolling through using the up/down arrow keys, select phonebook by pressing the left selection key on Phonebook.
2. (Alternatively, you can click on the right selection key to select names to open the phonebook contact lists)
3. Scroll up using the up/down arrow key and select "Photo contact" using the left selection key.
4. Then select an Empty Photo contact by scrolling up or down using the up/down arrow keys, then using the left selection key click on edit.
5. Type in their name by using the keypad.
6. Then press the down arrow key and type in their phone number using the keypad.
7. Then press the down arrow key to caller picture. Using the left and right arrow keys. Select how you want to add a picture for this contact. By taking a photo using the camera or from an already saved photo from files.
8. Then click options using the left selection key on the option you wish to choose. Then either take a photo or choose the photo depending on which option you wish to choose.

9. Then using the up/down arrow keys scroll to caller ringtone. It is set as default. By using the left and right arrow keys you can select a different ringtone for that contact. Once you have chosen which ring tone. Click on options using the left selection key and click save.
10. Then using the left selection key, click options then click Save.

Making a phone call using the phonebook

1. Click on menu then click on phonebook using the left selection key. Or using the right selection key click on names
2. Using the up/down arrow keys scroll through your list of contacts
3. Once you have highlighted the contact you wish to call, click on the green answer key to dial that contact

Making a phone call using the photo contacts

1. Click on the down arrow key while in home screen mode
2. It will then display your 8 saved photo contacts.
3. Using the up/down arrow key you can scroll through your 8 contacts
4. Using the number keypad press the number of the person you wish to call.

Making a phone call using the M1/M2/M3 Speed dial keys

1. Using the Keypad hold down either M1/M2/M3 to dial the contact saved to that speed dial number

Making a phone call using the 2-9 Speed dial keys

1. Using the keypad, hold down on the speed dial number contact you wish to call
2. The phone will then ring that saved contact

Answering a phone call

1. To answer an incoming call while the phone is closed, Simply flip the phone open and the call will automatically be answered.
2. To answer an incoming call while the phone is open, simply press the green answer key to answer that call

Rejecting/Silencing a phone call

1. To reject or silence an incoming call while the phone is closed, simply press the volume keys on the right-hand side of the phone.
2. To reject or silence an incoming call while the phone is open, simply press the red hang up button on the keypad.

Activating loudspeaker/Handsfree on calls

1. After answering a call or dialling a contact and you have connected, simply click on H-Free using the right selection key to turn on loudspeaker/handsfree.
2. To switch back to handheld mode, simply click on H-Held using the right selection key.

Ending a phone call

1. To end a phone call, simply close the phone or press the red hang up key

Messages

Write text messages

1. To write text messages, click on menu using the left selection key. Scroll up or down using the up/down arrow keys until you see messages. Then select ok using the left selection key.
2. Then using the left selection key, select ok on write message.
3. Then using the left selection key, select ok on text message.
4. Using the keypad, type your message you wish to send.
5. Once complete, using the left selection key, select options.
6. Then using the left selection key select send to
7. Using the left selection key again, choose the contacts you wish to send the message to, or type in the phone number you want to send the message to.
8. Then using the left selection key, select options then select send.

Write a Multimedia message

1. To write multimedia messages, click on menu using the left selection key. Scroll up or down using the up/down arrow keys until you see messages. Then select ok using the left selection key.
2. Then using the left selection key, select ok on write message.
3. Then using the left selection key, select ok on multimedia message.
4. Using the keypad, type your message you wish to send.
5. Using the left selection key, select options, scrolling down you will see you can add pictures, sound, videos and more.
6. Using the left selection key, you can choose one of those options to insert a picture, sound or video.
7. Once complete, using the left selection key, select options.
8. Then using the left selection key select send to
9. Using the left selection key again, choose the contacts you wish to send the message to, or type in the phone number you want to send the message to.
10. Then using the left selection key, select options then select send.

Inbox/View Messages

1. To view your message inbox, select menu using the left selection key.
2. Then using the up/down arrow keys scroll through until you find message and select ok using the left selection key.
3. Using the up/down arrow keys scroll down to Inbox and select ok using the left selection key.
4. You will see all your message items you have received.
5. By using the up/down arrow keys highlight which message you wish to view
6. Using the left selection key select options on that message.
7. You will now have options to choose for that message, by using the up/down arrow keys you can scroll through each option. Using the left selection key will select that option.

View – View that message

Reply by SMS – reply to the message via text message

Reply by MMS – reply to the message being able to add pictures, videos, sound and more

Call Sender – Call the person who sent you the message

Forward – Forward this message onto another contact

Delete – Delete this message

Delete All – Delete all messages in your inbox

Mark Several – Select several messages you wish to take the same action on

Mark as unread – mark this message as unread to remind you to read it again or reply to

Advanced – here you can copy the message to your phone, move to your phone, copy all messages, move all messages

Details – This will show the phone number of who sent the message and details when it was sent and where the message is saved

Delete Messages

1. Select Menu using the left selection key
2. Using the up/down arrow keys, scroll until you have highlighted messages, then using the left selection key select ok

3. Using the up/down arrow keys scroll through until you have highlighted Delete messages then select ok using the left selection key
4. Then using the up/down arrow keys, highlight which folder of messages you wish to delete.
5. Then using the left selection key, select ok and then select yes to delete the messages in that folder.

Call History

1. Using the left selection key, select Menu
2. Then using the up/down arrow keys scroll through until you highlight, Call history
3. Then using the left selection key click ok
4. Using the up/down arrow keys you can scroll through each function of call history by using the left selection key to select the function you wish to view.

Missed calls – Shows all your missed calls. By using the up/down arrow keys you can scroll through each missed call, you can select one by using the left selection key on options. You will then be able to either, view, call, send SMS, send mms, add caller to blacklist, edit number before calling and delete.

Dialled calls – this will show the phone calls you have made. By using the left selection key on the one you want to select you can view, call, send SMS, send mms, add to blacklist, edit number before calling or delete.

Received calls – this will show the calls you have received and answered. By using the left selection key on the one you want to select you can, view, call, send SMS, send mms, add to blacklist, edit number before calling or delete.

All Calls – This will show all calls that have been missed, dialled or received

Delete call history – here you can delete your call history. By using the left selection key, you can choose which folder you wish to delete.

Alarm

1. Using the left selection key, select menu.
2. Then using the up/down arrow keys, scroll through until you have highlighted Alarm then using the left selection key select ok
3. To edit an alarm, using the left selection key select edit
4. Using the left and right arrow keys you can turn the alarm on or off
5. Using the up/down arrow keys, scroll down to the time.
6. Using the number keypad type in the time you want the alarm to go off. (Select the time in 24hr format)
7. Then using the down arrow key scroll down to Repeat.
8. Using the left and right key you can repeat the alarm once, Every day or custom.
9. If selecting custom, using the down arrow key scroll down to the days. Using the left selection key and the left and right arrow keys you can select days you want the alarm to go off.
10. Once complete, using the right selection key select done and click yes using the left selection key to save.

Magnifier

1. Using the left selection key, select menu.
2. Then scroll through using the up/down arrow keys until you have highlighted magnifier.
3. Using the left Selection key, press ok on magnifier.
4. This will then open the camera function.
5. By pressing the up or down arrow keys you can zoom in and out on words, pictures, objects to see them more clearly.

FM Radio

1. Using the left selection key, Select menu.
2. Then scroll through using the up/down arrow keys until you have highlighted FM Radio
3. Then using the left selection key, press ok on FM Radio

Search and scroll through stations

1. Using the left and right arrow keys you can auto search stations. It will stop on a station when it finds one.
2. Using the up/down arrow keys will manual search for a station.

Adjust the volume

1. Using the volume keys located on the right hand side of the phone, you can adjust the volume up or down

Options Menu

1. By using the left selection key and clicking options, you will bring up the FM Radio options list.

Here you can:

Channel List – You can save a channel list by selecting options and selecting edit and typing in the channel name and frequency. You can save up to 30 channels.

Manual Input – You can manually input the frequency to search for that channel

Auto Search – By clicking select on this function, you can auto search and save all available channels.

Settings – Here you can adjust the FM Radio Settings. Background Play, Loud speaker on or off, Record format, Record storage and RDS settings.

Record – By selecting on record. It will record that station

File List – Here you can select and view recordings you have made.

Turning off the FM Radio

1. To turn off the FM Radio Simply press the M2 key to stop playing the FM Radio

Voice Memos

This menu option enables you to create voice tasks which the phone will remind you to complete a task or remind you to do a task you need to do.

1. Using the left selection key, select menu, then using the up/down arrow keys scroll through until you highlight Voice Memos
2. Using the left selection key, select ok on voice memos
3. Select new using the left selection key to create a voice memo reminder
4. Type in the subject of the voice reminder using the keypad
5. Then scroll down using the down arrow key to Reminders sound.
6. Then using the left selection key, click on record.
7. Using the keypad select number 2 to start recording, speak into the phone to create the voice memo.
8. Once complete, click the right selection key to stop the recording then click the left selection key to save the voice memo audio. Then click back using the right selection key
9. Scroll down using the down arrow key to select the remind date and time.
10. Using the keypad type in the date and time you want the reminder to start.
11. Then scroll down using the down arrow key to highlight repeat.
12. Using the left and right arrow keys – you can select, the reminder once, every day, custom days, weekly, monthly or yearly.
13. Using the up/down arrow key you can scroll down to sound loop – using the left and right arrow keys you can select 10 times, always, 1 time, 3 times or 5 times. This option will save how many times the voice memo will repeat itself.
14. Then using the up/down arrow keys, scroll down to reminder interval – using the left and right arrow keys you can select 5 minutes, 10 minutes, 1 minute or 3 minutes.
15. Once you have completed, select ok using the left selection key and click save using the left selection key.

Edit a Voice memo

1. To edit a voice memo, follow steps 1 and 2 above
2. Using the up/down arrow keys highlight the voice memo you want to edit.

3. Then using the left selection key click options.
4. You can then select view, add, edit, search, delete, delete all, delete overdue, delete all, jump to date, view uncompleted, send to calendar or save as a file.
5. Using the up/down arrow keys highlight the option you wish to select, then using the left selection key select which menu option.

View – Allows you to view the voice memo contents

Edit – Allows you to edit the voice memo. Follow the steps above in this menu option

Search – Search for a voice memo using the keypad

Delete – delete this voice memo by using the left selection key

Delete all – Delete all voice memos by using the left selection key

Delete overdue – Delete overdue voice memos by using the left selection key

Jump to date – type in the date using the keypad to go to a specific date of voice memos

View uncompleted – view any uncompleted voice memos

Send to calendar – Send the voice memo reminder to your calendar

Save as a file – save this voice memo in your files folder on your phone

Camera

1. Select menu using the left selection key.
2. Then using the up/down arrow keys scroll through until you have highlighted camera, then select ok using the left selection key
3. The camera function will then open.
4. To take a photo click on the up arrow key. It will then take about 3 seconds for that photo to automatically save.

Camera Settings/Options

1. While in camera mode, select options using the left selection key.
2. The options menu will then appear. By using the up/down arrow keys you can scroll through each option. To open one of these options, click the left selection key to open it.

Photos – Shows all your photos you have taken

Camera Settings – Click the left selection key to select ok to open the camera settings.

LED Highlight – By clicking the left and right arrow keys you can turn the LED highlight on or off

Anti-flicker – By clicking the left and right arrow keys you can change it to 60hz or 50hz

Contrast – By clicking the left and right arrow keys you can change the Contrast to high, medium or low

Delay timer – By clicking the left and right arrow keys you can change the delay timer to off, 5 seconds, 10 seconds or 15 seconds

Image Settings – Using the left selection key, click ok to open the image settings

Image Size – By clicking the left and right arrow keys you can change the image size to 240x320, 320x240, 640x480, 1600x1200 or 2592x1944

Image quality – By clicking the left and right arrow keys you can change the image quality to normal, good or low

White Balance – Clicking ok using the left selection key will open the white balance menu

You can change the white balance by scrolling up or down using the up/down arrow keys, then clicking ok using the left selection key to select which white balance setting you want.

Scene Mode – By clicking ok using the left selection key, it will open the scene model.

Using the up/down arrow keys you can select which scene mode you prefer, then click ok using the left selection key.

Effect settings – Click ok using the left selection key, this will open the effect settings.

Using the up/down arrow keys you can select which effect you would like to use.

Storage – Click ok using the left selection key. Using the up/down arrow keys you can choose to save photos to either the phone or memory card (if you have inserted a TF-Card)

Restore default settings – By clicking ok using the left selection key and clicking yes, this will revert all the settings back to default settings.

Organizer

Calendar

1. Press menu using the left selection key
2. Scroll using the up/down arrow keys until organizer is highlighted, then click ok using the left selection key to open the organizer menu.
3. Scroll using the up/down arrow keys until Calendar is highlighted, then click ok using the left selection key to open the calendar.
4. You can scroll through calendar dates using the up/down, left and right arrow keys.

Options menu

1. Click options using the left selection key to open the options menu
2. Once opened you can scroll through all the options using the up/down arrow keys. You will have the following options available:

View – By clicking select using the left selection key on view will show you all events you have on the day you have selected.

View all – By clicking select using the left selection key, view all will show you all events you have in your calendar

Add event – Clicking select using the left selection key on adding an event.

- Using the left selection key, you can select what type of event you want to add, Reminder, Meeting, Course, Date, Call or Anniversary
- Using the up/down arrow keys you can scroll down to start date. Using the keypad type in the start date
- Scroll down and type in the time of the event by using the keypad
- Scroll down and type in the end date using the keypad
- Scroll down and type in the end time using the keypad
- Then scroll down and type in the subject of the event using the keypad
- Then scroll down to alarm and choose whether to set an alarm for this event using the left and right arrow keys
- If you choose an alarm, then scroll down using the arrow key and enter the alarm date and time for this event

- Then scroll down to repeat and choose if you want to repeat this calendar event. You can choose, once, Every day, Custom, Weekly, monthly or yearly using the left and right arrow keys
- Scroll down to location and choose a location or address for this event
- Then scroll down to details and add any further information for this event

Delete event – Click select using the left selection key to delete any event

Jump to date – Click select using the left selection key, then type in the date using the keypad to jump to a specific date in your calendar

Go to today – Click select using the left selection key and this will take you to today's date in you calendar

Go to week view – Click select using the left selection key and this will change your calendar view to weekly. You can then change back to monthly by following the same process.

Calculator

1. Click ok on calculator using the left selection key to open the calculator
2. Using the keypad, you can type in your numbers.
3. Then using the up/down arrow keys you can highlight the calculation you wish to use. Plus, minus, times by or divided by
4. Then using the keypad type in your next set of numbers.
5. Follow the same process until you have completed then click ok using the left selection key to get your answer.
6. Once finished you can then clear this calculation by using the right selection key

Bluetooth

1. Using the left selection key click on menu.
2. Then scroll through using the up/down arrow keys to highlight organizer then click ok using the left selection key
3. Scroll down to Bluetooth using the down arrow key then click ok using the left selection key
4. Using the up/down arrow keys you can scroll through each Bluetooth option
 - **Power** – by clicking the left selection key you can turn Bluetooth on or off

- **Visibility** – by clicking the left selection key you can turn your phones Bluetooth visibility on or off
- **My Device** – By clicking ok using the left selection key then clicking ok on search a new device using the left selection key you can search for nearby Bluetooth devices. Once the phone has found nearby devices you can scroll through the list by using the up/down arrow keys, then click pair using the left selection key to connect to that device
- **Search audio devices** – By Clicking ok using the left selection key your phone will search for nearby audio Bluetooth devices, once your phone has found nearby devices you can use the up/down arrow keys to scroll through the devices, then click pair using the left selection key to connect to that device.
- **My Name** – by clicking ok using the left selection key, you can change the name of your device by using the keypad
- **Advanced settings** – by clicking ok on advanced settings you can change the Audio path, storage and sharing permissions

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by 3 Feet Solutions Pty Ltd is under license. Other trademarks and trade names are those of their respective owners.

Multimedia

Image Viewer

1. Click on menu using the left selection key
2. Scroll through until you have highlighted Multimedia then select ok using the left selection key.
3. Then click ok on image viewer using the left selection key
4. You can then scroll through all your images using the up/down, left and right arrow keys.
5. Select options using the left selection key to open the options menu.
6. You can then select an option using the left selection key
 - **View** – View images
 - **Image Information** – View the image information
 - **Browse style** – Change how to view your images from list style to matrix style
 - **Send** – Send the image via multimedia message or via a connected Bluetooth device
 - **Use as** – Using the left selection key you can use the image as wallpaper, Screensaver, Power on display, Power off display and caller picture
 - **Rename** – Rename the image using the keypad
 - **Delete** – delete the image using the left selection key
 - **Sort by** – name, type, time or size using the left selection key
 - **Delete all files** – Delete all the images in this folder
 - **Storage** – Change where you want the images stored Phone or Memory TF Card

Audio Player

1. Click on menu using the left selection key
2. Scroll through until you have highlighted Multimedia then select ok using the left selection key.
3. Then click ok on Audio Player using the left selection key
4. To play audio click the M2 key, to pause click the M2 key again.

5. To rewind click the M1 key, to fast forward click the M3 key

Sound Recorder

1. Click on menu using the left selection key
2. Scroll through until you have highlighted Multimedia then select ok using the left selection key.
3. Then click ok on sound recorder using the left selection key

How to record

- Click the 2 key on the keypad, record the sound, then click the 2 key to pause or the 5 key to stop the recording.
- To save the recording click the left selection key to save

How to replay a recording

- Click on list using the left selection key
- Scroll up or down using the up/down arrow key
- Click options using the left selection key of the recording you wish to choose
- Click select on play using the left selection key.

Recording options

- **Play** – Play that recording
- **Rename** – Rename that recording using the keypad
- **Delete** – Delete that recording using the left selection key
- **Delete all files** – Delete all recordings using the left selection key
- **Use as** – Use as an incoming call sound using the left selection key
- **Send** – Send as a multimedia message or via Bluetooth using the left selection key
- **Settings** – Change where you want the recording saved - Phone or Memory TF Card

File Manager

1. Click on menu using the left selection key

2. Scroll through until you have highlighted Multimedia then select ok using the left selection key.
3. Then click ok on file manager using the left selection key
4. Then click options using the left selection key
5. Then open using the left selection key
6. You can then access your audio, Music and Photos using the left selection key

SOS Settings

1. Click menu using the left selection key
2. Then scroll through until SOS settings is highlighted using the up/down arrow keys
3. Then click ok using the left selection key

SOS Mode settings

1. Click ok on SOS mode settings using the left selection key
2. You can then turn SOS mode on or off

Set SOS numbers

1. Click ok on Set SOS numbers
2. Click edit ok on any available empty slot using the left selection key
3. Add a contact from your phone book by click ok on add from phonebook using the left selection key. Scroll through using the up/down arrow key then click ok on a contact using the left selection key
4. Or Scroll down to edit number and click ok using the left selection key and type in the phone number you want to add using the keypad then click ok.
5. Follow the same process for all 5 Empty slots if you wish to have 5 emergency SOS contacts

SOS Message On/Off

1. Click ok on SOS Message on/off using the left selection key
2. Turn the SOS message on or off by using the up/down key and clicking ok using the left selection key

SOS Message

1. Click ok on SOS message using the left selection key
2. Type in the message you want to be sent in case of an emergency using the keypad
3. Click ok once finished to save using the left selection key

Warning tone status

1. Click ok on warning tone status using the left selection key
2. Using the up/down key you can turn the warning tone on or off. Then click ok to save using the left selection key

Activating SOS Alert

1. Once SOS has been setup you can activate SOS Alert by holding down the SOS button on the back of the phone for 3 seconds or more
2. The phone will then activate the siren, text message all your emergency contacts and begin to try contact each emergency contact you have selected
3. To deactivate SOS once activated simply press the red hang up key on the keypad

Settings

Phone Settings

1. Click on menu using the left selection key
2. Then scroll through until settings is highlighted using the up/down arrow key then click ok using the left selection key
3. Click ok on Phone Settings using the left selection key
4. Here you can scroll through using the up/down arrow keys and click ok using the left selection key on the following settings:
 - Time and date:
 - Set your home city by selecting ok using the left selection key, scrolling down using the up/down keys until you have highlighted cities then using the left and right arrow keys change to your selected city and then click ok using the left selection key to save that setting.
 - Set time/date – Set your time and date by typing in the time using the keypad, scroll down to select AM or PM, then scroll down and type in the date using the keypad, you can then scroll down to turn daylight savings on or off using the left and right arrow keys. Then click ok using the left selection key to save these settings
 - Set Format – Using the left and right arrow keys you can change the time format from 12hr to 24hr and scroll down to date to change the date format by using the left and right arrow keys.
 - LED Settings
 - Status – You can turn the LED light on or off
 - Time Settings – Select the time you want the LED light flashing
 - Schedule Power
 - Click ok on a time using the left selection key
 - Using the left and right arrow keys you can turn the status on or off
 - Scroll down to Power on using the down arrow key
 - Using the left and right arrow keys you can change to power on or power off
 - Scroll down to the time using the down arrow key, then type the time in 24hr format using the keypad of when you would like the phone to turn on or off

- Repeat the same process if you want to add more Power on or Power off settings
- Language
 - Click ok on Language
 - Using the up/down arrow key, scroll through to highlight the language you would like to use
 - Click ok using the left selection key to select that language and save
- Display
 - Click ok on Display using the left selection key

Wall paper – Click ok on wallpaper using the left selection key.

Click ok on System using the left selection key, using the up/down arrow keys and clicking ok using the left selection key you can view and save a different wallpaper

Click ok on User Defined using the left selection key, then click ok on phone using the left selection key. Here you can then select a photo to save as your wallpaper

Screen saver – Click ok on screensaver using the left selection key.

Click ok on settings using the left selection key. You can turn the screensaver mode on or off using the left and right arrow keys.

Scroll down using the down arrow key and select ok on select using the left selection key, you can then either choose a system screen saver image or a user defined screensaver image by clicking ok using the left selection key

Power on display – Click ok on power on display using the left selection key.

You can then select system or user defined images by clicking ok using the left selection key.

Power off display – click ok on power off display using the left selection key.

You can then select system or user defined images by clicking ok using the left selection key.

Show date and time – Click ok on Show date and time using the left selection key.

Using the up/down arrow key you can turn this function on or off by clicking ok using the left selection key.

- Auto update time
 - Click ok on Auto update time by using the left selection key
 - You can then scroll up or down using the up/down arrow keys
 - Click ok on a preferred setting using the left selection key

- Flight Mode
 - Click ok on flight mode using the left selection key
 - Using the up/down arrow keys you can scroll through the selections
 - Click ok on selection using the left selection key

- LCD backlight
 - Click ok on LCD backlight using the left selection key
 - Using the left and right arrow keys you can change the brightness of the backlight and change the backlight timer.
 - Click ok to save your preferred setting

Call Settings

1. Click on menu using the left selection key
2. Then scroll through until settings is highlighted using the up/down arrow key then click ok using the left selection key
3. Click ok on Call Settings using the left selection key
4. Here you can scroll up or down using the up/down arrow keys
 - Caller ID – Click ok using the left selection key to open the Caller ID menu. You can select Set by network, Hide ID or Send ID.
 - Using the up/down arrow keys select your preferred option by clicking ok using the left selection key.

 - Call Waiting – Click ok using the left selection key to open call waiting settings.
 - You can activate, deactivate or query the status by scrolling up or down using the up/down arrow keys and clicking ok using the left selection key.

- Call Divert – Click ok using the left selection key to open the call divert settings
 - By scrolling up or down using the up/down arrow keys then clicking ok using the left selection key on a preferred setting. You can divert all voice calls, if unreachable, if no answer, if busy, all data calls or cancel all diverts

- Call barring – Click ok using the left selection key to open the call barring menu.
 - By scrolling up or down using the up/down arrow keys then clicking ok using the left selection key you can call bar, Outgoing calls (All calls, International voice calls, International voice calls except to home), incoming calls (All voice calls, Voice calls when roaming) and cancel all.

- Advanced Settings – Click ok on advanced settings using the left selection key.
 - Blacklist – Select ok using the left selection key to turn blacklist number on or off. Then scroll down using the down arrow key, then ok using the left selection key to add blacklist numbers
 - Whitelist – Select ok using the left selection key to turn whitelist number on or off. Then scroll down using the down arrow key, then ok using the left selection key to add whitelist numbers
 - Auto redial – Click ok on Auto redial using the left selection key to turn auto redial on or off
 - Answer mode – Click ok on answer mode using the left selection key. Then scroll up or down using the up/down arrow keys, then click ok on the preferred answer mode option using the left selection key.

Sound Frequency

1. Click on menu using the left selection key
2. Then scroll through until settings is highlighted using the up/down arrow key then click ok using the left selection key
3. Click ok on Sound Frequency using the left selection key
4. Using the up/down arrow keys scroll through to select the preferred sound frequency then click ok using the left selection key to save.

Low Battery Notice

1. Click on menu using the left selection key
2. Then scroll through until settings is highlighted using the up/down arrow key then click ok using the left selection key

3. Click ok on Low Battery notification using the left selection key
 - Status – Click ok using the left selection key then scroll up or down using the up/down arrow keys and click ok using the left selection key to turn this setting on or off
 - Notified contacts – Click ok using the left selection key, then click edit on an empty slot using the left selection key. You can then add a contact from your phonebook or choose edit number to type in a phone number using the keypad
 - Notification SMS – Click ok using the left selection key, then you can type your preferred message using the keypad or keep the default message by clicking save using the left selection key

User Profiles

1. Click on menu using the left selection key
2. Then scroll through until settings is highlighted using the up/down arrow key then click ok using the left selection key
3. Click ok on user profiles using the left selection key
 - Using the up/down arrow keys you can scroll through to select your preferred user profile. Click options, then click activate using the left selection key to select you preferred profile.
 - To edit a user profile, highlight that profile then click options using the left selection key, then scroll down to customise and click select using the left selection key and the up/down arrow keys

Here you can adjust the following settings:

Alert type – Using the left and right arrow keys, you can change from vibrate and ring, vibrate then ring, Ring only and Vibrate only.

Ring Type – Using the left and right arrow keys, you can change to repeat or Beep once

Incoming call – Click options using the left selection key, then click select on change using the left selection key. Using the up/down arrow keys you can scroll through each ring tone. Once you have chosen your preferred ring tone click select using the left selection key to save that ring tone.

Ringtone Volume – Using the left and right arrow keys, you can adjust the ringtone volume up or down

Message tone – Click options using the left selection key, then click select on change using the left selection key. Using the up/down arrow keys you can scroll through each message tone. Once you have chosen your preferred message tone click select using the left selection key to save that message tone.

Message Volume – using the left and right arrow keys, you can adjust the volume of the message tone up or down

Keypad – Using the left and right arrow keys you can adjust the keypad tones from human voice, silent, click or tone.

Keytone volume – Using the left and right arrow keys you can adjust the volume of the keypad tones up or down

Power on – Using the left selection key, click options, then click change. Then using the up/down arrow keys you can scroll through the power on tones. Click select on a preferred tone using the left selection key.

Power off - Using the left selection key, click options, then click change. Then using the up/down arrow keys you can scroll through the power off tones. Click select on a preferred tone using the left selection key.

Cover open - Using the left selection key, click options, then click change. Then using the up/down arrow keys you can scroll through the cover open tones. Click select on a preferred tone using the left selection key.

Cover close - Using the left selection key, click options, then click change. Then using the up/down arrow keys you can scroll through the cover close tones. Click select on a preferred tone using the left selection key.

System alert – Click options using the left selection key, then using the up/down arrow keys you can turn the system alert on or off.

Once you have completed all your User profile setting changes, click options then click save using the left selection key to save all the settings.

Speed Dial

1. Click on menu using the left selection key
2. Then scroll through until settings is highlighted using the up/down arrow key then click ok using the left selection key
3. Click ok on speed dial using the left selection key

M1/M2/M3 Speed Dial Keys

- Click ok using the left selection key
- Click ok on status to turn speed dial on or off
- Scroll down using the down arrow key then click ok on set numbers using the left selection key
- Select an empty speed dial slot and click edit using the left selection key

- Scroll through your phonebook using the up/down arrow keys
- Once you have highlighted the contact you want to add, click ok then click yes to save using the left selection key
- Follow the same process to add extra speed dials

2-9 Speed Dial numbers

- Click ok using the left selection key.
- Click ok on status to turn speed dial on or off
- Scroll down using the down arrow key then click ok on set numbers using the left selection key
- Select an empty speed dial slot and click edit using the left selection key
- Scroll through your phonebook using the up/down arrow keys
- Once you have highlighted the contact you want to add, click ok then click yes to save using the left selection key
- Follow the same process to add extra speed dials

Up/Down Key shortcuts

1. Click on menu using the left selection key
2. Then scroll through until settings is highlighted using the up/down arrow key then click ok using the left selection key
3. Click ok on Up/Down key shortcuts using the left selection key
4. Using the up/down arrow key select which shortcut you wish to change
5. Then click ok using the left selection key.
6. Using the up/down arrow keys, scroll through the available shortcut list.
7. Once you have highlighted the preferred shortcut click ok using the left selection key to save this shortcut.

Network settings

1. Click on menu using the left selection key
2. Then scroll through until settings is highlighted using the up/down arrow key then click ok using the left selection key

3. Click ok on Network settings using the left selection key

WARNING: These settings are your network settings specific to your SIM Card provider. We suggest contacting you network provider before adjusting any of these settings

Security Settings

1. Click on menu using the left selection key
2. Then scroll through until settings is highlighted using the up/down arrow key then click ok using the left selection key
3. Click ok on Security settings using the left selection key
 - Sim Security – Click ok on SIM Security using the left selection key
 - Pin Lock – Click ok on PIN Lock to enter your PIN Lock
 - Change PIN – Click ok on Change PIN to change you SIM PIN code
 - Phone Security – Click ok on Phone Security using the left selection key
 - Phone Lock – Using the left selection key you can turn the phone lock on or off
 - Change Password – Using the left selection key, click ok on change password. Input the old password (the default password is 0000) using the keypad then click ok using the left selection key, then type in the new password you wish to set using the keypad then click ok using the left selection key, then re-type that same password using the keypad then click ok to save the new password using the left selection key.
 - Auto keypad lock – click ok on auto keypad lock using the left selection key
 - Using the up/down arrow key you can select when you want the keypad to lock - off, 15 seconds, 30 seconds, 1 minute or 5 minutes. To save your preferred selection click ok using the left selection key.

Restore factory settings

1. Click on menu using the left selection key
2. Then scroll through until settings is highlighted using the up/down arrow key then click ok using the left selection key
3. Click ok on restore factory settings using the left selection key
4. Using the keypad type in the phone password – (the default password is 0000)
5. Then using the left selection key click yes to restore the factory settings.

Troubleshooting and Support

If you are experiencing difficulties with your mobile phone, please go through the following troubleshoots:

The Mobile Phone will not power on

1. Ensure the battery is inserted correctly
2. Ensure you are pressing and holding the power button for 5 seconds. (Red end call key on the inside of the phone)
3. Ensure you have charged the phone for at least 10 minutes

The phone is asking for a password on start-up

1. The default password is 0000, you can change the password via steps outlined previously in security settings

The phone is asking for a PUK code

1. This means you have input the incorrect password 3 times or more. Contact your SIM Card provider to retrieve your PUK code to unlock your phone.

SIM card error or no SIM card

1. Ensure you have inserted the SIM card correctly and are using the correct size SIM card. Follow instructions previously stated for installing the SIM Card.
2. Your SIM card may be damaged or dirty, ensure you replace your SIM with your SIM Card provider if this error occurs.

Failure to connect to the network

1. Your network signal may be weak or out of range. Contact your SIM Card provider or try the phone in a different location to check your signal.
2. Your SIM card may be damaged, invalid or has no credit. Contact your SIM Card provider for support.

Failure to make an outgoing call

1. Ensure you have entered the correct phone number you wish to dial.
2. Ensure you have enough credit on your SIM Card account. Contact your provider for support.
3. Your signal strength may be weak. Check your signal strength and contact your SIM Card provider.

Cannot hear anyone on the call

1. Ensure your call volume is adjusted to your requirements. Using the volume keys on the right side of the phone.
2. Ensure you have enough signal strength

Cannot receive calls

1. Ensure your mobile phone is switched on.
2. You have enough signal strength to receive calls.
3. Ensure you have not enabled call barring. You can find this under settings.
4. Ensure you do not have the phone in flight mode. See above for flight mode instructions.
5. Ensure your SIM card is installed correctly.

The other party cannot hear you on the call

1. Ensure your hand or fingers are not covering the Microphone.
2. Ensure you are speaking directly into the microphone.
3. Ensure the other party has their volume turned up to their desired level.

Mobile Phone won't charge

1. Ensure the power plug is inserted in the wall socket correctly and the wall switch is turned on.
2. Ensure the wall power socket is working by testing another device or a separate power socket.
3. Ensure you have inserted the mini USB cord into the phone correctly.

4. Ensure there is no dirt or dust accumulated in the phones power socket.
5. Ensure you have left the phone on charge for at least 10 minutes as the battery may have run out of charge completely.

Mobile phone won't connect via Bluetooth

1. Ensure you have turned on and activated the Bluetooth setting. See previous/above instructions.
2. Ensure the other device has Bluetooth enabled.
3. Your Bluetooth device may be too far away from the other device to connect. Ensure you are within range of this device to connect.
4. Ensure you follow the Bluetooth instructions as stated previously above.