



Lite 4G

Operator's Manual

Table of Contents

Safety Information	4
Quick Setup Guide	11
Turn the phone on for the first time .	15
Wake up and unlock the screen	16
Overview of the Phone	17
Phone Status Icons	20
Quick User Guide	22
Main Interface.....	29
Speed Dial.....	31
Phone Contacts.....	33
Call Logs	47
Messages.....	51
Sound Profiles	61
Clock	64

Camera / Video Recorder.....	71
Gallery / Image Viewer	74
Video Viewer	76
Music / Audio.....	79
FM Radio.....	83
Sound Recorder	87
Calendar with Voice Note	89
Calculator	96
File Manager	98
SOS.....	100
Torch	104
Settings	105
Troubleshooting and support.....	120

Safety Information

Welcome to Opel Mobile and thanks for purchasing our products. For the best performance, we recommend you read this manual carefully, especially the "safety instructions". This will take you a couple of minutes, but it will save you time later and will allow you to enjoy all the features on your device.

This model meets international guidelines for exposure to radio waves

Your mobile device is a radio transmitter and receiver. It is designed not to exceed the limits for exposure to radio waves recommended by international guidelines. These guidelines were developed by the independent scientific organization ICNIRP and include safety margins designed to assure the protection of all persons, regardless of age and health.

The guidelines use a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit for mobile devices is 2 W/kg and the highest SAR value for this device when tested at the ear was 0.821 W/kg*. As mobile devices offer a range of functions, they can be used in other positions, such as on the body as described in this user guide**. In this case, the highest tested SAR value is 0.973 W/kg*.

As SAR is measured utilizing the devices highest transmitting power the actual SAR of this device while operating is typically below that indicated above. This is due to automatic changes to the power level of the device to ensure it only uses the minimum level required to reach the network.

The World Health Organization has stated that present scientific information does not indicate the need for any special precautions for the use of mobile devices. They note that if you want to reduce your exposure then you can do so by limiting the length of calls or using a 'hands-free' device to keep the mobile phone away from the head and body.

Additional Information can be found on the website of the World Health Organization

**The tests are carried out in accordance with international guidelines for testing.*

***For body worn operation, this phone has been tested and meets the RF exposure guidelines when used with the Opel Mobile accessories supplied or designated for this product. Use of other accessories may not ensure compliance with RF exposure guidelines*

How to handle and preserve your device?

Trying to modify, disassemble or repair the device or the charger yourself will make the warranty invalid. Only certified repairers may install or repair phone equipment.

Avoid hitting or shaking your phone.

The warranty of this phone may be annulled if you use unauthorised accessories. To prevent this from happening and to keep your phone working properly use only the battery charger and microUSB cable that originally comes with the device.

Make sure the device does not get wet. To avoid possible, short-circuit, electric shock or corrosion keep your phone away from rain, water splash, sweat or moisture. You must not use your device with your hands wet or immerse it in water. In case it gets wet keep the phone off and do not try to use a microwave to dry it.

Do not use your phone when entering areas that are near flammable liquids.

Observe all local laws and regulations on the use of mobile phones. Turn off the device before entering petrol stations, oil refinery's or chemical plants.

This product should not be used in extremely hot, cold, dusty or humid spaces. It also should not be exposed to long periods of sunshine or strong magnetic fields.

If you have a pacemaker keep the phone at least a 20cm distance from the place it is located. This phone may cause interference to some hearing aids and other electronic devices.

Avoid all heat sources, ovens or other appliances (including amplifiers) that produce heat or have hot surfaces.

Switch off the phone when entering an aircraft.

Do not use a hand-held phone when operating any motor vehicles, heavy equipment or moving objects.

Excessive high-volume levels or noise may affect your hearing. To prevent this from happening use an adequate volume in your earphones when you are listening to music or employing any of the multimedia features on the phone.

High sound pressure is possible and presents a hearing damage risk. Do not listen at high volume levels for long periods.



You are fully responsible for keeping your information backed up and we do not take any legal responsibility for data that is damaged or lost. It is possible to erase or interfere with the information stored in your phone by a magnetic device when using your phone. To avoid this issue, keep your phone clear from magnetic devices.

Pointing the torch into your own or another person's eyes will cause damage and may result in blindness.

Safety recommendations for accessories

- Use only Opel Mobile accessories or chargers that came with this phone.
- Be careful when handling the battery. The lithium-ion battery can be put into use immediately after being unpacked. Use only the Opel Mobile battery that came with the device. We recommend charging the battery as soon as possible once the phone has been switched on.

Caution: Risk of explosion if battery is replaced by an incorrect type. Ensure you always only use the Opel Mobile battery that is specified for this device. Dispose of used batteries according to the instructions.

- Immediately stop using the battery charger if you smell an odour or overheats or a crack or swelling appears in the casing.
- In case you notice the cable, or the plug have suffered any damage, discontinue using it and contact Opel Mobile support line as soon as possible for advice.

Usage conditions and restrictions

- All packaging materials, especially plastic ones, must be disposed of properly. The lack of this procedure may cause a suffocation danger to children. Any packaging must be kept out of children's reach.
- This device is not a toy and not designed for children and strict adult supervision must be adhered to at all times. Keep the phone and the accessories beyond children's reach.
- This device can be recycled. To dispose of this device properly remember to follow local regulations. Local authorities may guide you on finding appropriate facilities to this end. The battery must never be disposed of in a fire.
- If this phone is lost or has been stolen, please notify your network service provider as soon as possible and ask for the SIM card to be deactivated.
- You are fully responsible for any damage caused by not following these instructions or for improper use of the device. We do not accept any liability for any improper use or mishandling on this device.

 
The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by 3 Feet Solutions Pty Ltd is under license. Other trademarks and trade names are those of their respective owners.

Quick Setup Guide


1. Unpack all the contents out of the packaging and have your SIM card ready to insert into the phone.

This phone requires a Nano size SIM card, it is the smallest of the 3 SIM card sizes available. If you don't have a nano SIM card, contact your network provider.


2. Firmly hold the device in one hand, using your thumb lift off the battery cover starting from the bottom left when looking at the back of the phone. The battery cover will then click off. (Please note you may need to use your fingernail to lift off the cover)

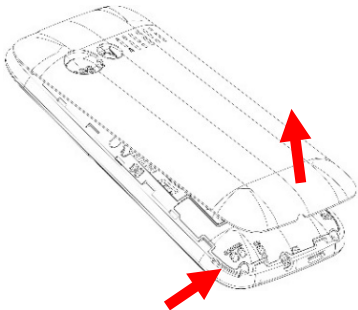

 3. Remove the battery from the phone by lifting from the bottom and pulling out. **(Skip this step if the battery is not inserted)**

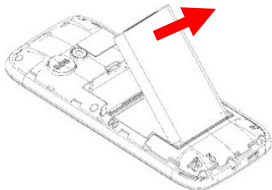

 
4. First slide the SIM tray door to the left to open it and put a nano SIM card in, and then slide the SIM tray door to the right to lock it. Please ensure the gold plates are facing downwards and the cornered edge is in the upper right corner.

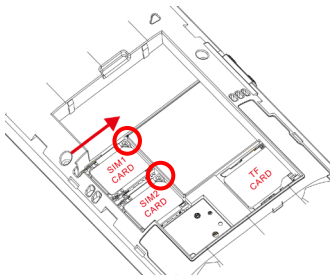


5. If you wish to use an optional microSD memory card for extra phone storage, insert it into the memory card slot.

First slide the memory card tray door to the right to open it and put a memory card in, and then slide the SIM tray door to the left to lock it. Please ensure the gold plates are facing downwards.

 PLEASE NOTE: supports up to 32GB microSD card only

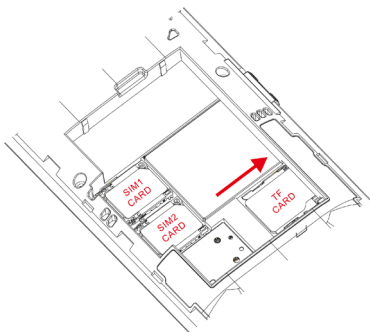

 6. Re-insert the battery back into the phone. Ensuring the gold plates on the battery and the phone are aligned.

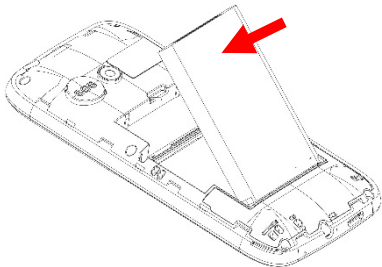

7. Replace the battery cover by sliding and pushing your fingers across the edges of the battery cover to ensure it has completely clicked back into place.
8. Charge the phone by plugging in the microUSB cable into the phone's charging port located at the bottom of the phone.

Please note: Charge the phone for at least 3 hours prior to use, to ensure long battery life.

Turn the phone on for the first time

After charging, turn the phone on by holding down the power button for 5 seconds.

The phone will begin to boot, once finished booting, your phone is ready to be used. If your SIM card is inserted and active, the time and date will be automatically set based on your location.

Power the phone on and off

1. To turn the phone on, press and hold the power button for 5 seconds.
2. To turn the phone off, press and hold the power button for 5 seconds.

Wake up and unlock the screen

If you have turned on “Auto keypad lock” under Settings – Display, the keypad will be locked and the screen will be off after the timeout value.

How to wake up and unlock

1. Press Left selection key (labelled as “Unlock”)
2. Press Right selection key (labelled as “OK”)

How to lock

 
1. Wait for the timeout value set for “Auto keypad lock” setting
2. Press the red end-call key at the home screen, if you have turned on “Lock screen by end-call key” under Settings – Security

Overview of the Phone







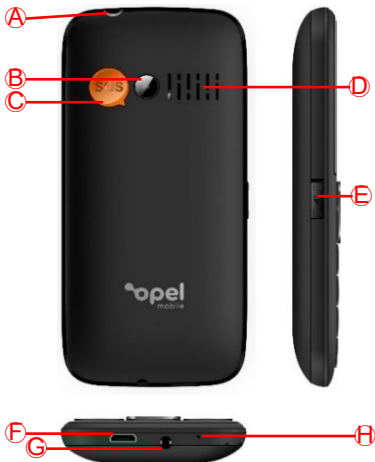


1	Earpiece
2	Up and down navigation keys / Volume keys
3	Answer / Call key
4	Left navigation key
5	FM Radio shortcut (press-and-hold)
6	OK key
7	End call / Power on/off key
8	Right navigation key
9	Silent / Vibrate mode (press and hold)
A	Torch LED
B	Camera
C	SOS button (press 3 times)
D	Loudspeaker











E	Torch switch
F	USB charging port
G	3.5mm headphone jack
H	Microphone



Phone Status Icons

Note: Icons are only for demonstration; they may differ on the actual device.


Icons	Descriptions
	Battery gauge
	Network signal strength
	VoLTE (4G Voice) service is activated
	Connected to roaming network
	No SIM card is inserted
	Memory card is inserted
	Unread SMS or MMS

	SMS/MMS storage is full
	Missed calls
	Call forwarding is activated
	HD Voice is on for the current call
	Earphone is connected
	Silent mode is on
	Vibrate mode is on
	Bluetooth® is on
	Alarm is set
	Flight mode is on

Quick User Guide


Answer a call

 1. To answer an incoming call, simply press the green "Answer" key.

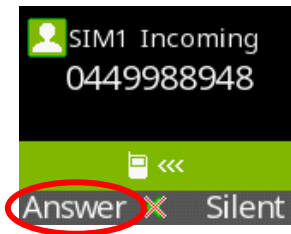


Reject and silence a call

 2. To reject an incoming call, you can press the red Hang up/Power key.

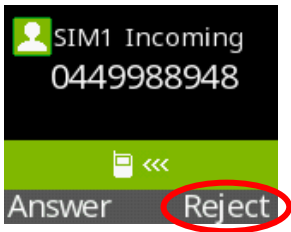


 3. To silence an incoming call, you can press the OK key or the right selection key.

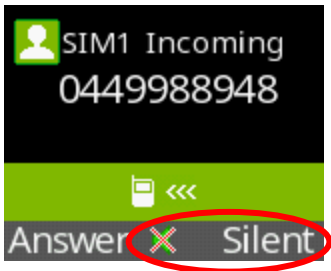


Dialing and using keypad numbers (123 mode)

 1. To dial a phone number, press the numbers on the keypad then press the green "Answer" key to dial.

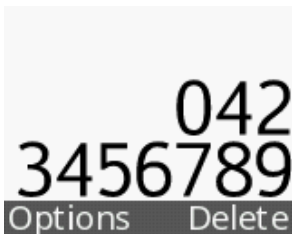

 2. To type numbers while creating a contact or writing a message, press the “Hash” # key until “123” mode is highlighted then press the ok key.

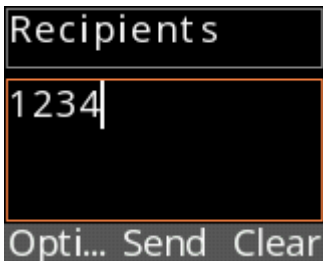

Typing Letters (en/En/EN/Abc/abc/ABC modes)

1. To type in letters, press the “Hash” # key to choose between En, en, EN, Abc, abc, ABC modes, once the mode you desire is highlighted press the OK key.
2. En, en and EN are predictive text modes with capital first letter, small letters or all capitals, respectively (see predictive text below).
3. Abc, abc and ABC are standard text modes. E.g. To type the letter “c”, press the “2 ABC” key 3 times until the letter “c” comes up.

 


Predictive text (En/en/EN modes)


Predictive text is a smart way to type messages. This feature can make typing easier by suggesting words based on what you are typing.

1. To use predictive text, press the “Hash” # key and select “En, en or EN”, then use the keypad to type the word without pressing the same key multiple times. E.g. To type “hello”, simply press the “4, 3, 5, 5, 6” keys once and the word “hello” will show up for selection. It also suggests other word options similar to what has been typed in.



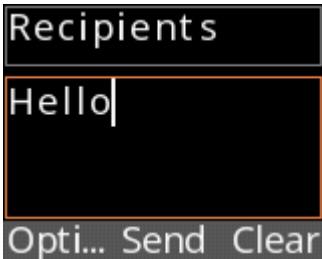

 2. To choose another candidate word, use the cursor keys to highlight it and then press "OK" key or "Space" 0 key to select the word.

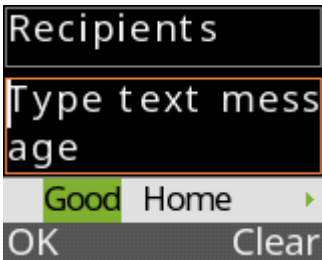

Symbols (except 123 mode)

To add symbols like dot, comma, question mark, etc., press the “Star” * key and scroll using the up/down cursor key and the Left and Right keys to choose the symbol you wish to use. Confirm your selection with the OK key.

 


Main Interface

Main Menu


From the main menu you will be able to access Messages, Contacts, Call Logs, Sound Profiles, Clock, Tools, Settings and SOS.

You can press the red Hang up/Power key to go back to the home screen.

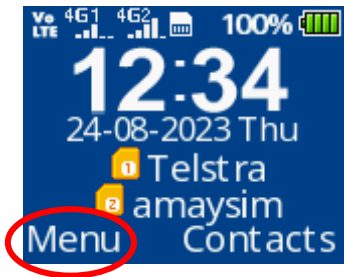

Notifications – Missed Calls and Unread Messages


 
Notifications will be displayed on the front cover of the phone and/or displayed on the main screen. You can review the details of the missed call or messages via the main menu and select the item for more information.

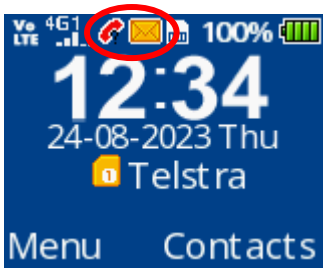

Speed Dial

Speed Dial is a quick and easy way to call the people that you may contact on a regular basis. Up to 8 contact shortcuts can be added to Speed Dial.

  
1. To set up Speed Dial, select the “Contacts” icon from the main menu, and press the Options key then scroll down to “Others” then select “Speed Dial”.

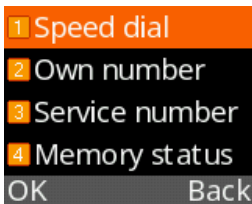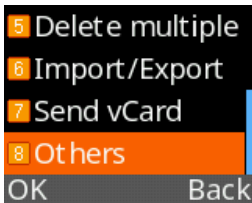

2. You can add contacts to the 2-9 number keys by either manually typing in the phone numbers or choosing an existing contact.




 
3. To remove a phone number from speed dial, highlight it and press the Options key then scroll down to Clear and press the OK key to delete.

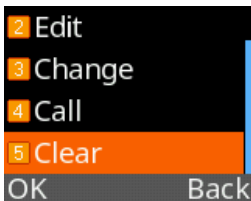

4. To call any of your Speed Dial contacts, press and hold the respective keypad number from the home screen for 3 seconds, the phone will then dial that saved contact.


Phone Contacts

  To access the phonebook, select the “Contacts” icon from the main menu, or simply press the right selection key at the home screen.

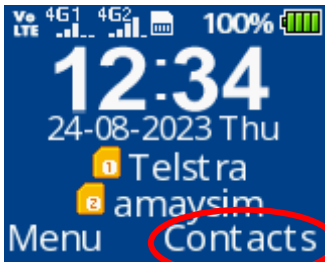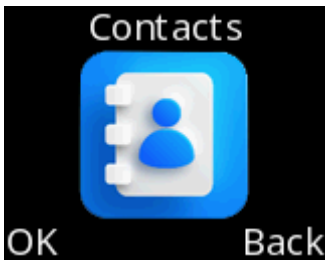


Add a contact


 
1. Press “Options” key and select “New contact” from the menu.

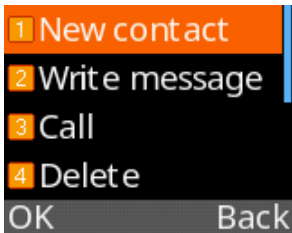

 
2. Choose “Phone” or “SIM” memory to save this contact

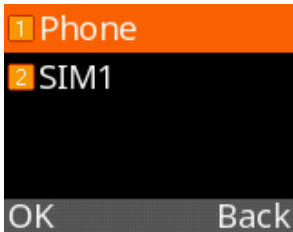

  
3. Press down cursor key to get to Name, then press OK key. Type in the contact name and press OK to confirm.

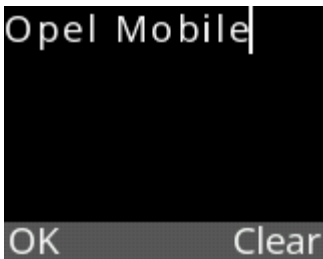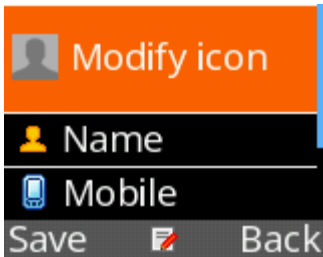

 4. Use the down cursor key to get to "Mobile" number, then press the OK key. Type in the phone number and press OK to confirm.

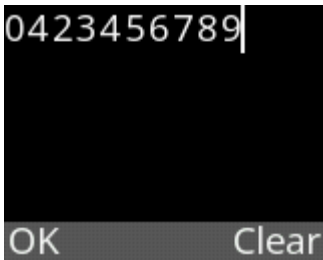


 
5. Press "Save" key to save the contact.

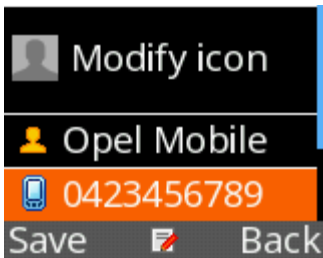


Edit a contact

1. Highlight the contact using the cursor keys, press "OK" key to view the contact. Then

  press Left selection key for “Options” and then “Edit” from the menu.

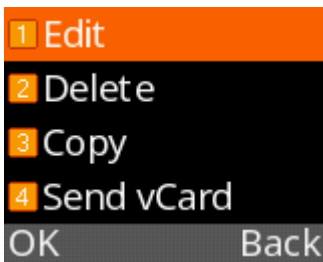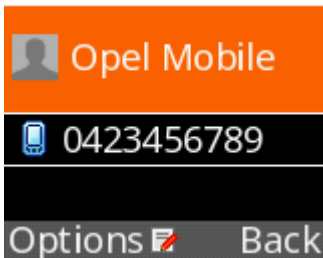


 2. Modify the contact's name and phone number using the keypad and press "Save" key to save the contact. (Refer to the previous "Add a contact" section)

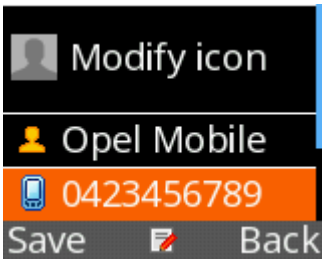


Delete contacts

 1. Highlight the contact using the cursor keys you want to delete, then press the “OK” key.
2. Press “Options” key and select “Delete” from the menu.

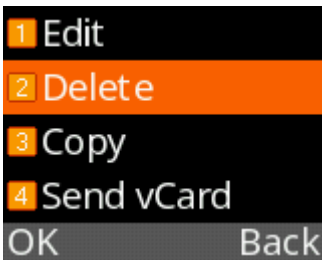



Search contacts

 Press any number on the keypad to access the search menu. A cursor will blink when it is in search menu. Type in some letters of the name of the contact you wish to find, press the “OK” key and the phone will list out the contacts matching with the letters you typed in.

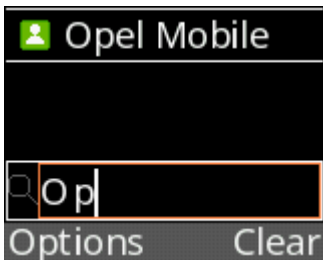


Call and Send message to a contact

  1. To call a contact in the Phonebook, highlight the contact using the cursor keys, press the “green call key” and the phone will call that contact highlighted.

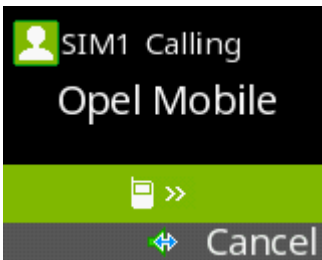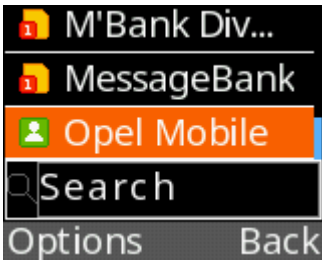


 
2. To send a message to a contact in the Phonebook, highlight the contact using the cursor keys, press "Options" key and select "Write Message" from the menu.

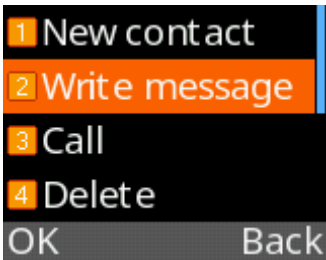



Import and Export contacts

  1. From the main menu select "Contacts", press "Options" key and select "Import/Export" from the menu.

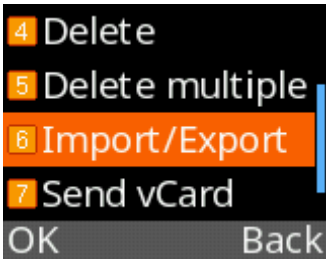


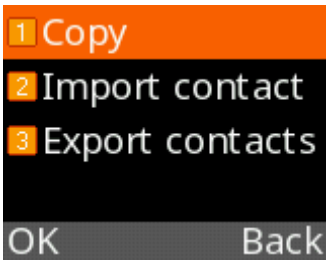

  
2. To copy contacts from phone to SIM or from SIM to phone. Press “OK” on Copy. Then press “OK” on “Copy from” and select either phone or SIM as the source. Then press “OK” key on “Copy to” and select either phone or SIM as the destination. Then press “Options” key and select “OK” to select contacts. Use the cursor keys and the “OK” key to select individual contacts, then press “Options” key and select “OK” to start copying.

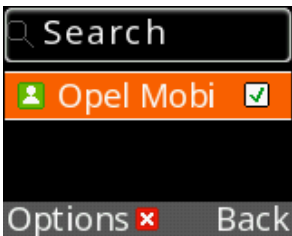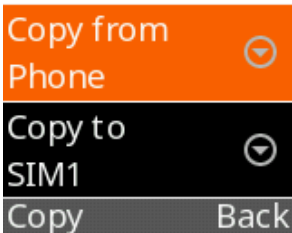

 3. To export contacts in phone memory to a memory Card, select "Export contacts". Then press "Options" key and select "OK" to select contacts. Use the cursor keys and the "OK" key to select individual contacts. Then press "Options" key and select "OK", and choose the folder you want to save the exported contacts.

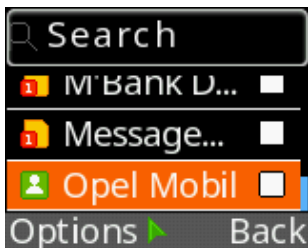


 4. To import contacts from a memory card to Phone memory, select "Import contacts". Then select the files you want to import by press the "OK" key. Then select "OK" to complete the import. You can press left and right cursor keys to select Internal phone memory or External memory card.

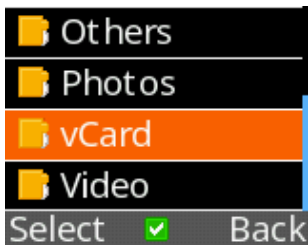


Send vCard via SMS, MMS or Bluetooth

 1. Highlight and press “OK” key on the contact you wish to send via SMS, MMS or Bluetooth

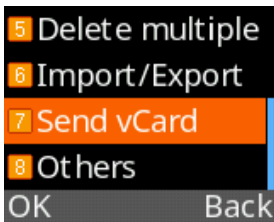

 2. Select “Options” and highlight “Send vCard” and press the “OK” key. The highlight and press the “OK” key on the method you want to send the vCard – SMS, MMS or Bluetooth.

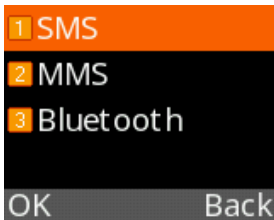


3. Sending by SMS, type the phone number or select “Contacts” and press “OK” key on the contacts you wish to send the vCard to, then select “options” and “OK” then press the “OK” key to send the vCard to the contacts selected.
4. Sending by MMS, type the phone number or press the “OK” key to open contacts, press the “OK” key on the contacts you wish to MMS the vCard, then select “options” and “OK”. Scroll down using the cursor to “Type text message” if you wish to send a text message with this vCard. Press the “OK” key to then send the MMS.
5. Sending by Bluetooth – make sure Bluetooth is switched on. Press the “OK” key to “Add new device” once the device you wish to send the vCard to is visible, select pair to bound the devices. The vCard will then be sent via Bluetooth once paired successfully.

Call Logs

To access call history including dialed calls, received calls, missed calls and rejected calls, select “Call Logs” icon from the main menu, or simply press the green “Answer/Call” key at the home screen.




 To view different types of call history, scroll down using the cursor keys to highlight a call log and press the “OK” key to view that particular type of record.

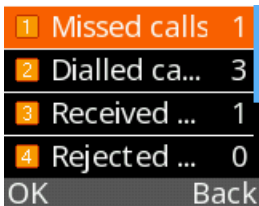


Call and Send message to a call log entry

 1. To call an entry from call logs, highlight the contact or number and press the green “Answer/Call” key, or press “Options” and select “Call”.

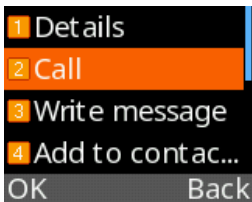


 2. To send a message to an entry from call logs, highlight the contact or number and press “Options” key and select “Write Message” and choose whether to send as SMS or MMS.

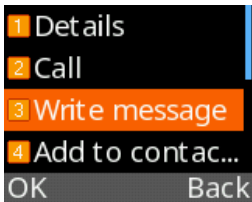


Add call log number to contacts

 Highlight the call log number and select options. Highlight “Add to contacts” and press the “OK” key, then choose to add as a new contact or to an existing contact.

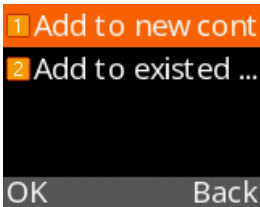


Add call log number to blacklist

 1. Highlight the call log number and select options. Highlight “Add to blacklist” and press the “OK” key.

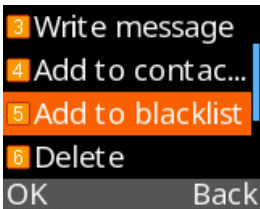


Delete call log entries

 1. From the main menu, select “Call Logs” and select the desired call history from the menu.
2. Select “Options” and scroll down to “Delete”, then press the “OK” key.

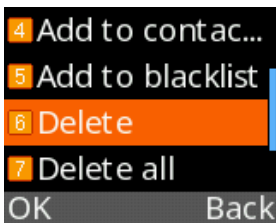


 3. You can also delete all call history from the main Call Logs screen by selecting “Delete all”.

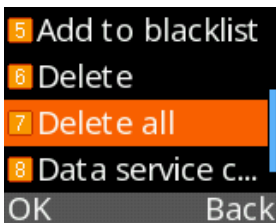


Messages

 
To access text and multimedia messages, select “Messages” icon from the main menu.

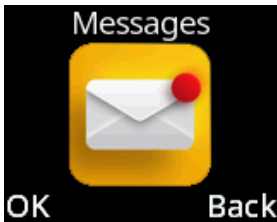


Create a new message

  1. Press the Options key to open the menu then select “New chat” and press “OK” key.

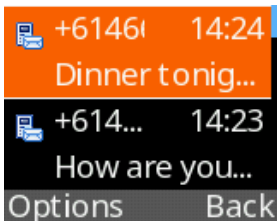

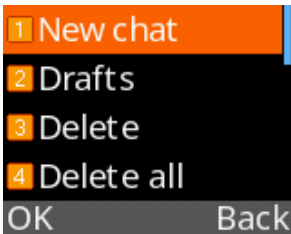


 2. In the "Recipients" box, type in a phone number or press "OK" key to choose a contact from contacts you want to send the message to.

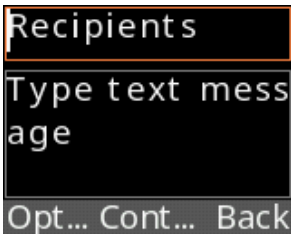

3. Press the down key to "Type text" box, type the message content using the keypad, and then press the Options key and then select "Send" to send the message. You can also

 send the message by pressing the “OK” key while in text box.

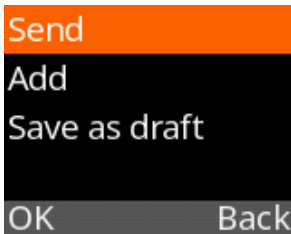


4. To change the text typing mode, press the “Hash” # key and choose between En, en, EN, Abc, abc, ABC and 123 modes using the up/down cursor keys. En, en and EN are predictive text modes, Abc, abc and ABC are standard text modes and 123 is the number mode.




Attach a media file

When creating a message, you can attach an image, video, audio file or a quick response.

 1. Press the “Options” key and select “Add” from the menu.


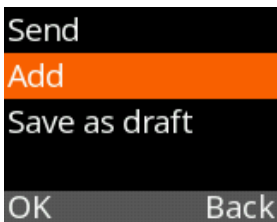


2. Attach the selected item – using the cursor keys and “OK” key to record or select a media file/quick response from the phone memory.

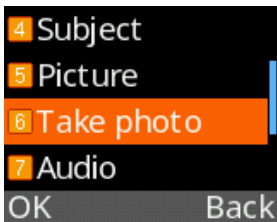 



View and reply to a message

  1. To view a new message or a previous conversation, press the “OK” key on the conversation you wish to view. Once opened you can scroll up and down to read the messages or view attachments that have been sent to you.
2. To reply to a message, scroll down to the text box then type the message using the keypad, and then use the “OK” key to send the message.

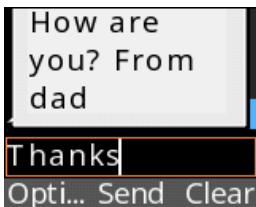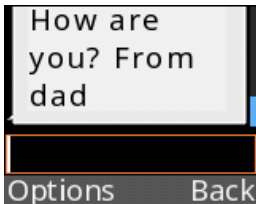


Delete or forward a message

  1. Use cursor keys to open the conversation and highlight the message you want to delete, forward or save, then press the “Options” key open the menu.
2. Select the actions from the menu by press the “OK” key

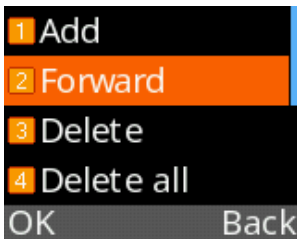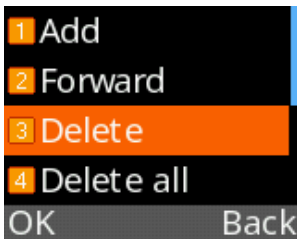



Save the media file attachment

 1. Use cursor keys to open the conversation and then read the MMS you want to save by pressing the “OK” key.

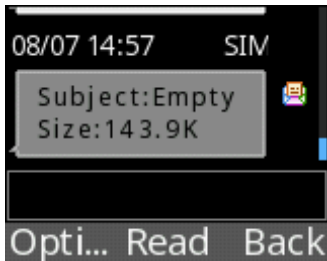

  
2. Press the “Options” key and select “Save media file” from the menu.

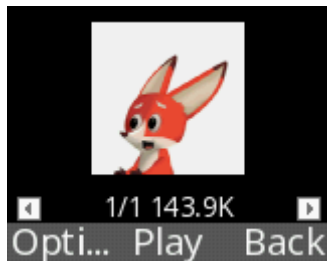

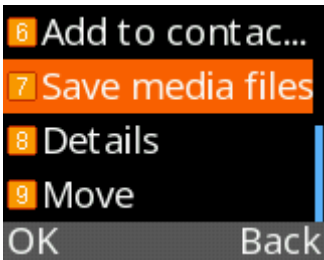


Quick Responses

 1. You can add new quick response or edit/delete an existing quick response. Press the “Options” key to open the menu then select “Quick responses” and press “OK” key.

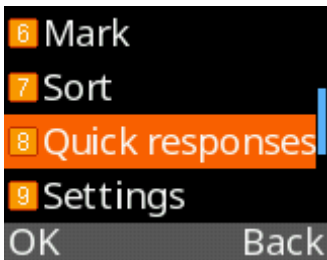

 2. Here you can edit or add a quick response message. To send a quick response, highlight it and press “OK” key to create a new message with it.

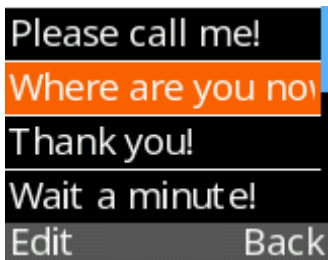

Message capacity

You can check the memory capacity for storing all the text and multimedia messages here. If the capacity has reached the limit, the device will not be able to receive any new message. Delete unwanted or read messages from time to time can prevent the problems caused by memory full.

SMS memory:

SIM1

0/30

SIM2

Back

10 Push Message

11 Cell broadcast...

12 Voice mail ser...

13 Message capacit

 
 
OK

Back

Sound Profiles



Here you can change Profile, ringtones, tone volume, ringtone mode and the keypad tones.

You can access Sound Profiles via the main menu or via the Settings.

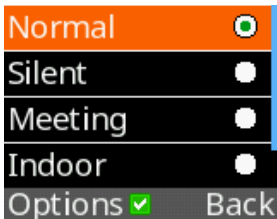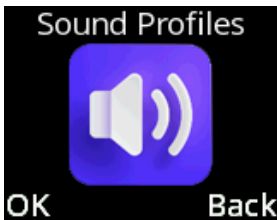



Press the "OK" key to activate the desired sound profile. Press Options key and then select Edit

  ringtones to edit the settings of highlighted sound profile.

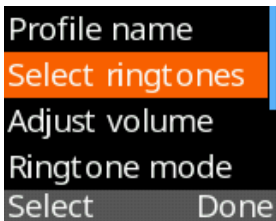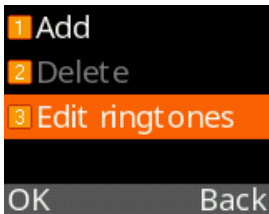


1. Profile name – Change the name of the sound profile.
2. Select ringtones – Change ringtone of calls and alert tone of incoming messages. Highlight the tone you wish to choose then press “OK”.

  3. Adjust volume – Change the sound volume of ringtones, alerts and voice calls. Use the up/down cursor keys to change the volumes.
4. Ringtone mode – Select ringing, vibrate or silent for calls and alerts.
5. Other alert ring – Change the dial tone (including **Talking Keypad**), tone of the keypad and battery low alert.

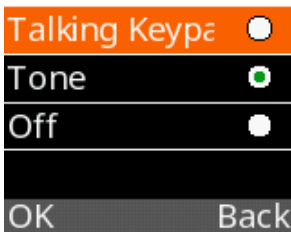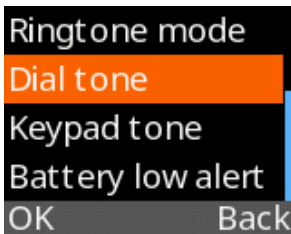



Clock

 To access the alarm clock, world clock and timer, select the “Clock” icon from the main menu.


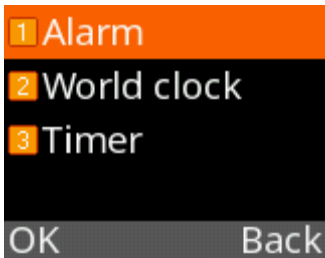


Alarm Clock

  1. You can set alarms to wake you in the morning or for other reminders. To turn on/off an alarm, highlight it and then press the Left Selection Key. Up to 3 alarms can be saved.

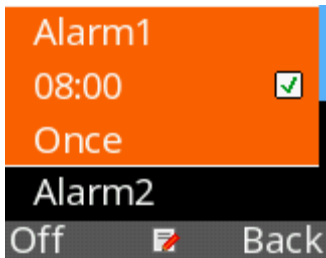
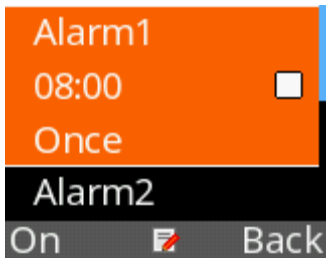


  
2. Press the OK key to edit an alarm. You can change the alarm name, time, tone and repeat mode. You even can record your own voice as the alarm tone.

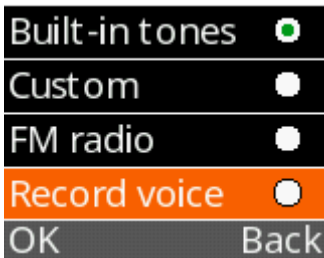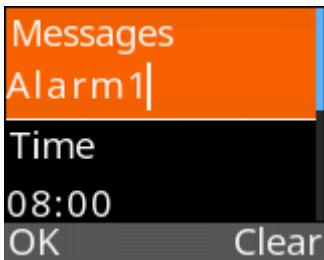


World Clock

   
1. To add cities to your world clock list, press the Options key, select Add city, and scroll down using the cursor keys to find the city you wish to include in your world clock.

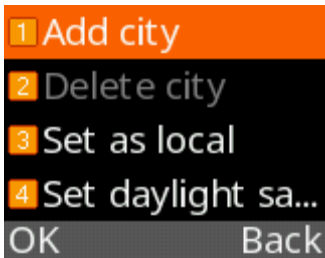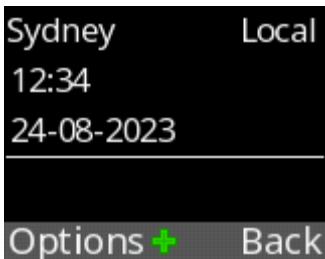

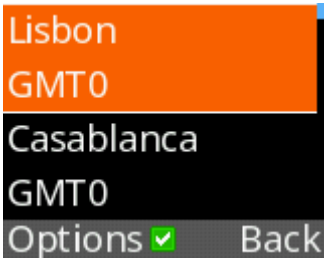

  2. To delete a city from your world clock list, press the Options key, select Delete city, and scroll down using the cursor keys to find the cities you wish to delete. Press OK key to confirm the deletion.

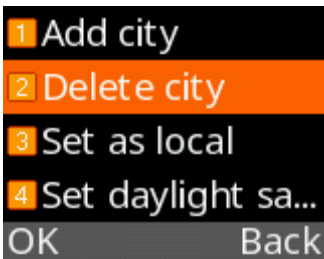


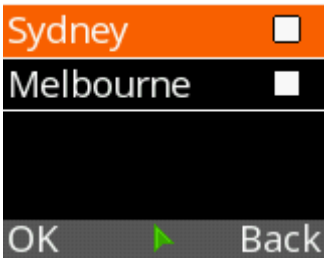

3. To select local time zone, press the Options key, select Set as local, and scroll down using the cursor keys to find the city you wish to set and press OK key to select it.
4. To setup Daylight Saving of a city on your world clock list, press the Options key, select Set Daylight Saving, and scroll down using the cursor keys to find the cities you wish to set. Press OK key to confirm the deletion.



Timer

 Use the keypad number, type the time you wish to count down. For example, to do 1 Minute, type in 0, 0, 0, 1. Then press “OK” key to start the timer and the Left Selection key to stop it completely. An alarm will sound once the time is up.


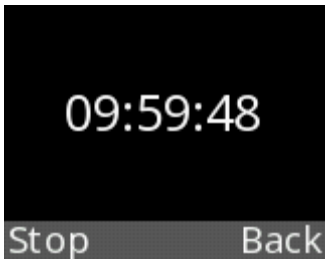


Camera / Video Recorder

  To take photos or record videos, select Tools icon from the main menu, then select Camera.

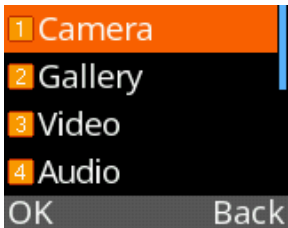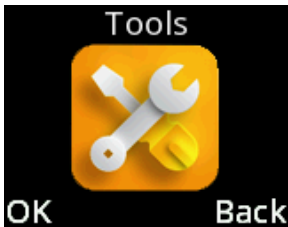

  
1. To shoot a photo - press the "OK" key to start capturing. You also can change photo effect and the options for capturing the images by pressing the Options key.

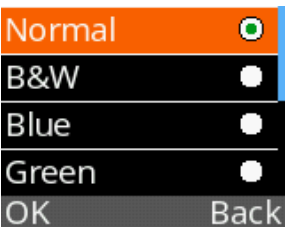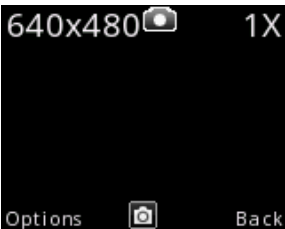

2. To shoot a video – press the Options key and select Video mode. You also can change video effect and the options for capturing the videos by pressing the Options key.





 3. To view the last photos, select “Options” and select “Gallery”. To view the last video, press “Options” while in video mode and select “My video” and press the “OK” key on the video you want to play.
4. To change camera settings – press “Options” and then select “Settings” to configure Picture Quality, Shutter Sound, Auto save and Storage options (Optional SD Storage).

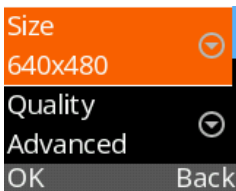


Gallery / Image Viewer

  To access the photos captured and saved, select Tools and then Gallery icon from the main menu.

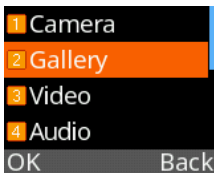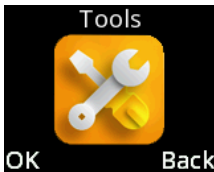

 1. Use cursor keys and "OK" key to open the photo file you want to view.

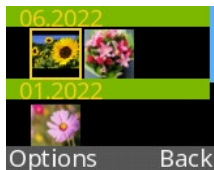

2. Use left/right cursor keys to view the next or previous photo files.

 
 


3. Press "Options" key and select the various actions from the menu, such as Set as wallpaper, Set as contact thumbnail, Delete, Share, Rename, Slide play and Details.




Video Viewer

For playing video files - Select Tools and then Video icon from the main menu.

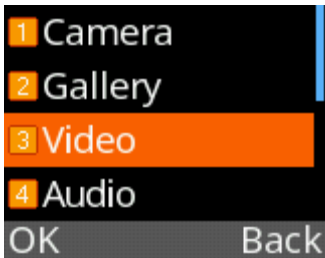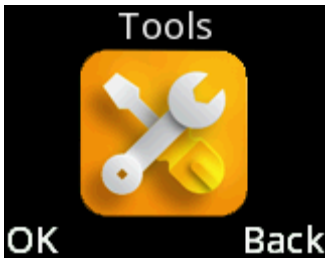


By selecting Video, you will see the most recent file.


 
1. Press "OK" key to play the most recent video. Left/Right cursor keys to go to the next/previous video. Up/Down cursor keys for adjusting the sound volume.

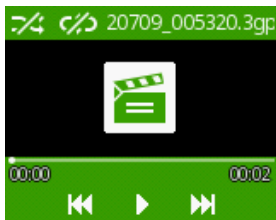

 2. Press the Left Selection key to select the various actions from the menu, e.g. Open other video files, Repeat, Shuffle, Settings and File details.


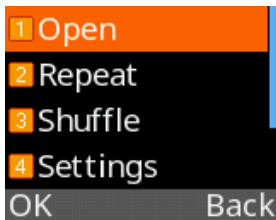


  3. To view all saved video files, you can press the Left Selection key, select Open and then Local browse.

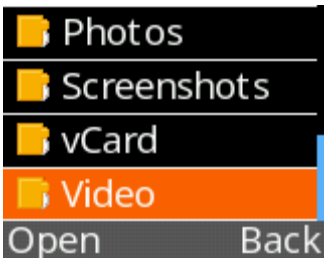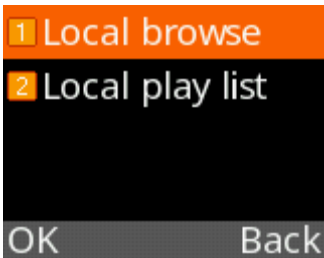


Music / Audio

  For playing audio files - Select Tools and then Audio icon from the main menu.

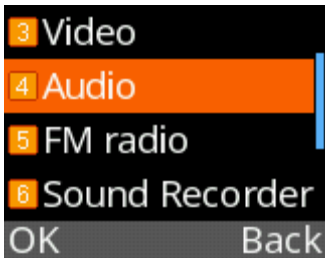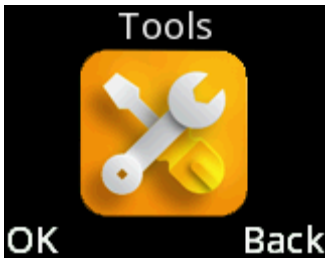


Press "OK" key to play/pause the music. Press the Left/Right cursor keys to go to the next or previous

 
tracks, or press and hold to fast forward or rewind the current music playing. Press End Call or Back key to leave the music being played in background, while operating the phone as usual.

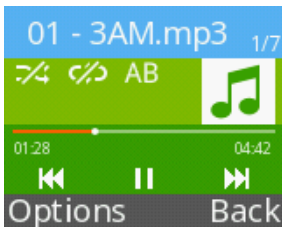


Music playlist

  1. To create a new music list, press the Options key and select Music list, then press Options key again and select New list.

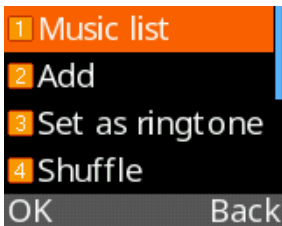

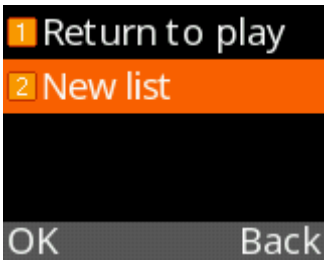


 2. To add music files to a music list, highlight one of the lists and press OK key to view the details, and then press the Options key and select Add music.

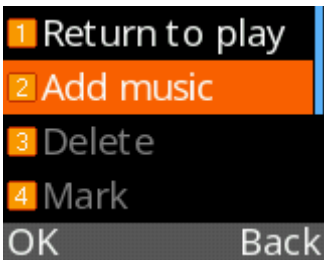


Playing options

 1. To set the current music file as ringtone, press the Options key and select Set as ringtone.


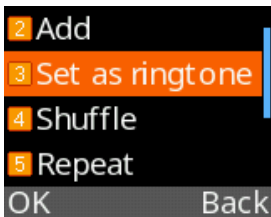


 2. To randomly playing music files within a playlist, press the Options key and select Shuffle.
3. To repeat playing music, press the Options key and select Repeat.

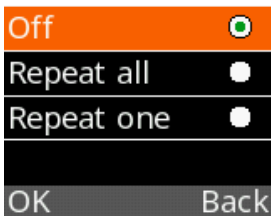


FM Radio

  The FM Radio can be accessed via the Tools icon on the main menu. Please note: For better FM reception and sound quality, it is suggested to be used in an outdoor environment.

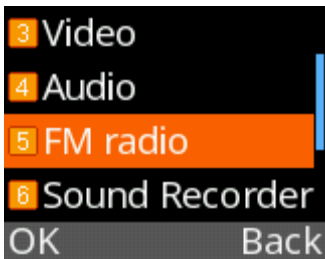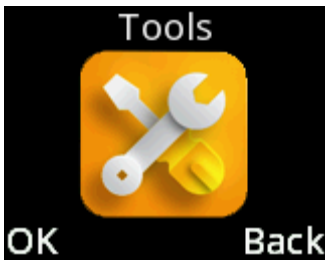

 
For quicker access, you can press and hold the “0” key while at the Home Screen.

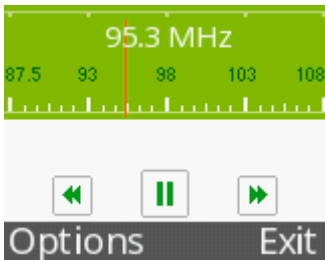


Press the “OK” key to turn on/off FM radio. Press Left/Right cursor keys to go to the next or previous preset station or press and hold to search for the next/previous available station. Press End Call key to leave FM radio turned on in background, while operating the phone as usual. To turn off the FM Radio press the “Exit” key.

Preset radio stations

 1. Press the Options key and select Auto search and save to search for all available radio stations in your area.

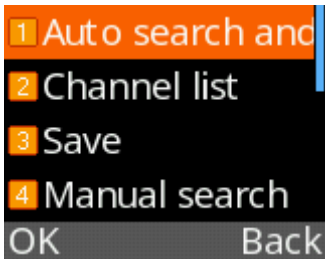


 2. Press the Options key and select Channel list to Edit or Delete preset channels.

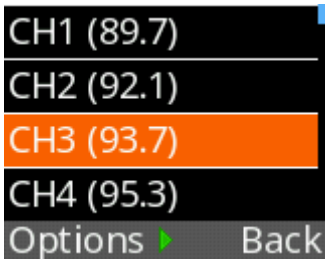



Record FM radio

 Press the “Options” key and select Record or Scheduled record to record the FM radio programme as an audio file saved in the phone memory.


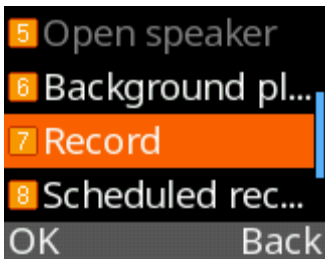


Sound Recorder

  To access the Sound Recorder, select the “Tools” icon from the main menu, then select “Sound Recorder”.

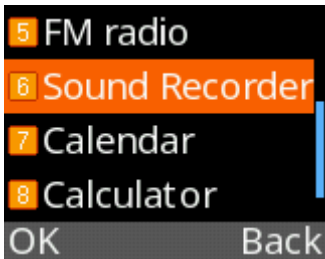
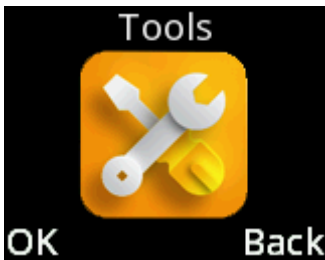


  
You can record your voice or any sound and store them in the phone. Use the OK key to start/pause recording, and the Stop key to stop and save the recording.

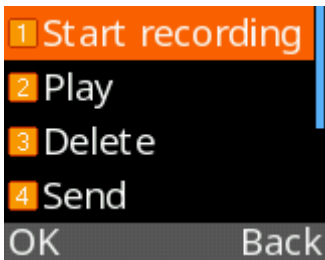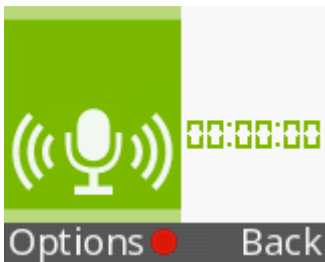

Calendar with Voice Note

   
To access the calendar, events and reminders, select the “Tools” icon from the main menu, then select “Calendar”.

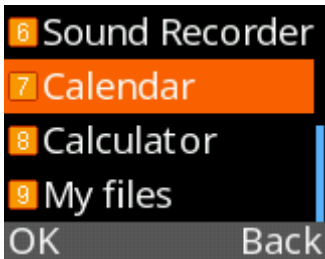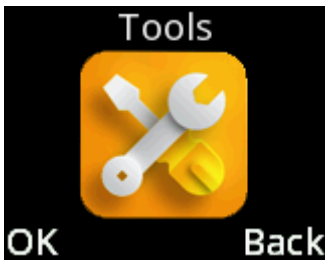

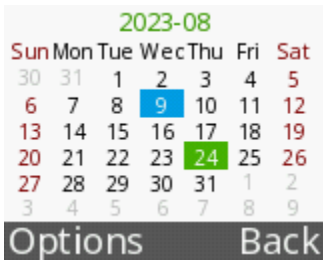


Create a new event

 1. Use cursor keys to select a date and press "OK" key to create an event.

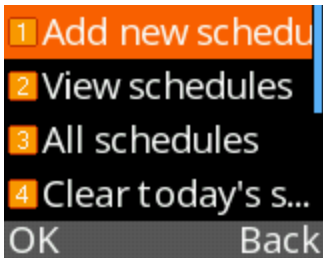

2. Type in the event title in the Subject and use the cursor keys and keypad numbers to

 
adjust the date, time, ringtone and repeat mode. Press "Save" to save the event.

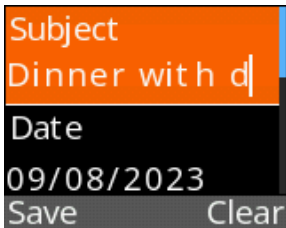

The screenshot shows a mobile application interface for creating an event. It features an orange header with the text "Subject" and "Dinner with d". Below this is a black section with the text "Date" and "09/08/2023". At the bottom, there is a grey bar with two buttons: "Save" on the left and "Clear" on the right.


Create a reminder with voice note

 1. When creating or editing an event, you can record your voice as the reminder. Scroll to "Reminder tone" and press "OK" key.

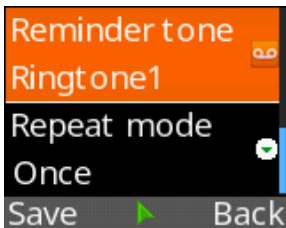


The screenshot shows a mobile application interface for setting reminder options. It features an orange header with the text "Reminder tone" and "Ringtone1". Below this is a black section with the text "Repeat mode" and "Once". At the bottom, there is a grey bar with three buttons: "Save" on the left, a green arrow pointing right in the center, and "Back" on the right.

 2. Select “Record voice”, and press “OK” key again to start recording.

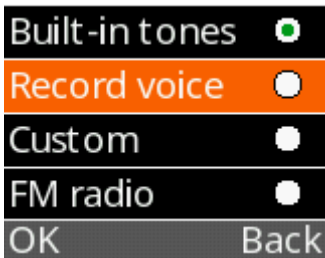


 3. Press the “Stop” key to finish recording, and press “OK” key again to save and use this recording as the reminder.

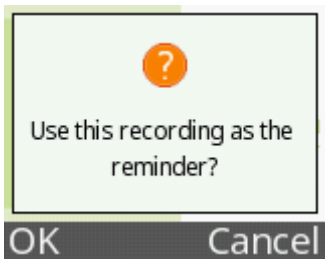


Edit or delete an event

 
1. Use cursor keys to select a date and press “OK” key to open it. (Date with events is denoted by an orange flag)

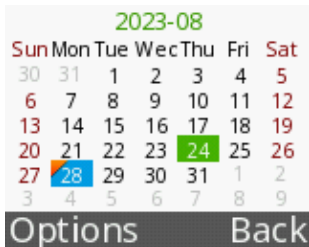

 2. Use cursor keys to highlight an event and press “OK” key again to view the details of an event.

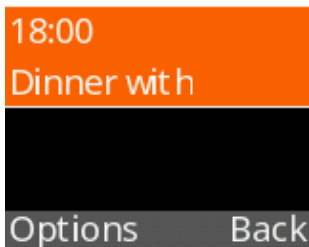


 3. Press “Options” key and select “Edit” or “Delete” from the menu.

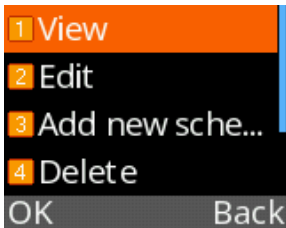



View all schedules

 Press “Options” key while viewing the monthly calendar, select View schedules to view the events on the highlighted date, or select View all schedules to view all the events saved.

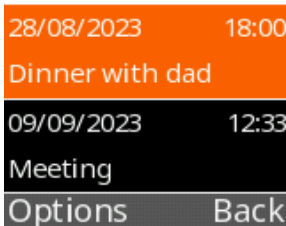



Weekly view or Daily view

  Press “Options” key while viewing the monthly calendar, then select Weekly or Daily for different calendar views.

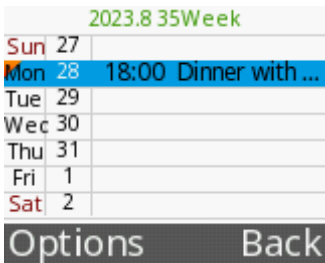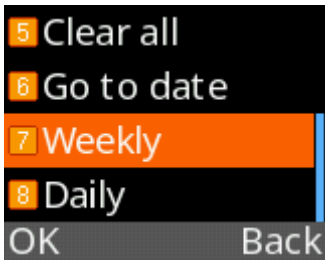


Calculator

  To access the calculator, select “Tools” icon from the main menu, then select “Calculator”.

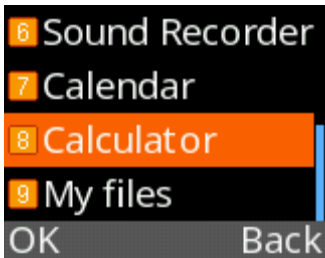
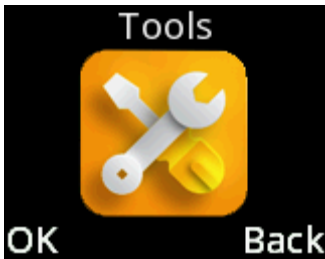


 
Press the number keys on the keypad and use the cursor keys for the calculations. The “Hash” # key is for typing a decimal point. The +/- key is for switching between negative and positive number. The Delete key is for cancelling the last key typed. The “OK” key is equal.

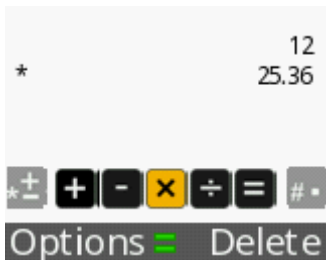


File Manager

   To access the files stored in the phone or external memory card, select the Tools icon from the main menu, then select “My files”.

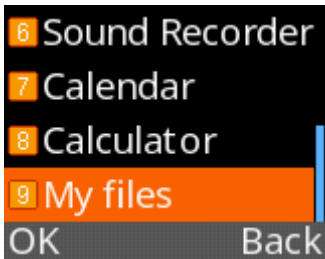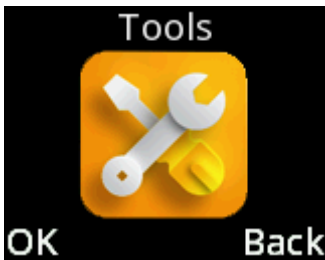

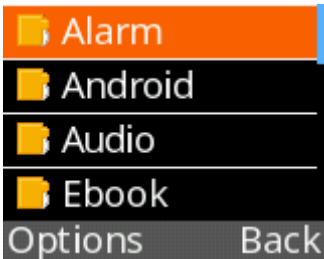

 
Use cursor keys to highlight the file you want to manage, then press the "OK" key to open the file or press Options key to select various actions, including create new folder, send via SMS/MMS/Bluetooth, delete, view details, search, rename, copy/cut and paste.

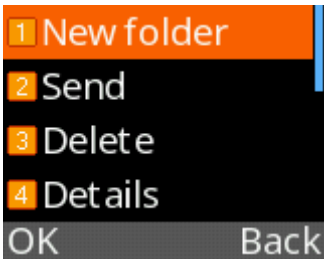

SOS

SOS feature is designed for people who need to contact their family or close friends by just pressing the SOS button on the back on the phone **3 times**, in case there is an emergency.

 When the SOS is activated, it will send a text message to all your saved emergency contacts.

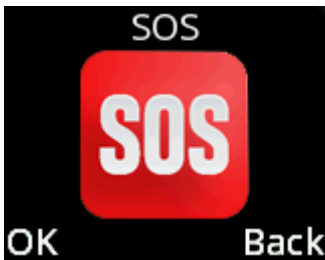

Important: After the phone has sent out the text messages, it will then attempt to ring your saved emergency contacts until someone answers the phone call.

Calling SOS in
5 second

Cancel

1. From the main menu, select the SOS Emergency icon and press the “OK” key.
2. You can set up your SOS contacts, customize SOS message, disable the SOS function, turn on/off siren while activating SOS.

1 SOS contacts

2 SOS message

3 SOS settings

 
4 Help

OK

Back

Add or edit an emergency contact


1. Select SOS Contacts to add up to five contact numbers by pressing Options, then Edit or Import contacts.

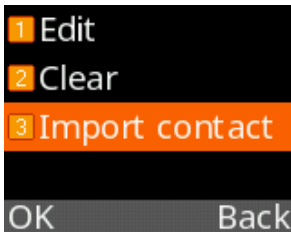

2. You can either type in a phone number manually or select an existing contact from your phonebook.


Edit the emergency text message

 Select "SOS Message" and press "OK" key to edit your emergency text message.

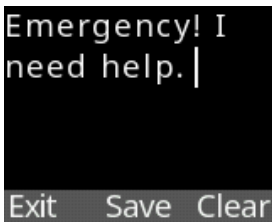

SOS settings

 You can enable or disable the SOS function, and turn on/off siren while activating SOS.


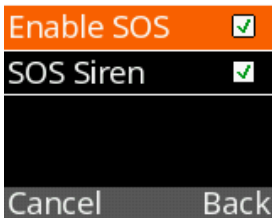


Torch

To turn on the LED flashlight, flip the switch on the left-hand side of the phone.


Settings

  Under Settings you will be able to adjust most of the phone settings, e.g. Bluetooth, Phone settings (Time & date, Restore factory settings), Display settings (Wallpaper, Brightness), Sound profiles (Ringtones, Sound volume, Other tone settings), Security (SIM PIN number, Phone password, Blacklist), Call settings (Dual-SIM Manager, Call forwarding, Call waiting) and Networks.

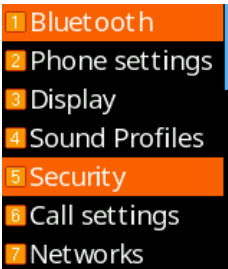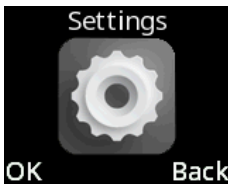


Bluetooth

 Press “OK” key to switch Bluetooth on or off. Click on “Paired device” and “add new device” to search for nearby devices. Once it has found the device you want to connect to, select the device and it will begin to pair to that device. Once paired, it will say “Connected”. Please note: Some devices will require passwords to connect, ensure you read the instructions on the other device to connect via Bluetooth. TIP: some Bluetooth passwords are **1234** or **0000**.

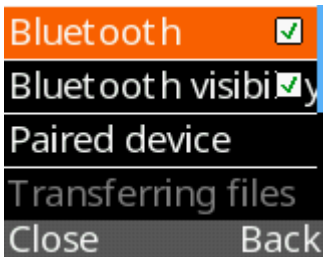


Phone settings

 
Here you can change Time & Date, Shortcuts and Restore factory settings.

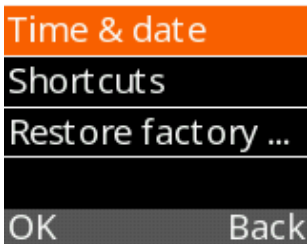

 1. Time & Date – Change the time and date on the phone, use the cursor keys and the number keypad to modify the date and time and their formats, then press Done to save.

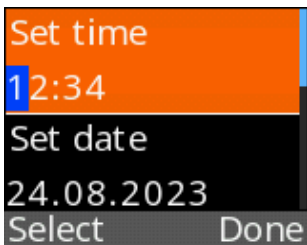


 
2. Shortcuts – Change the shortcuts function of Up/Down cursor keys. Press the “OK” key then highlight your selection using the cursor keys then press the Done to save.

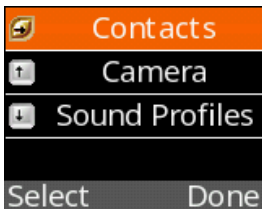

3. Restore factory settings – Clear all the data stored in the phone and restore all the settings to factory default. Default password is **1234**.

  
Please note: if you restore your device all information saved on this phone will be permanently deleted.

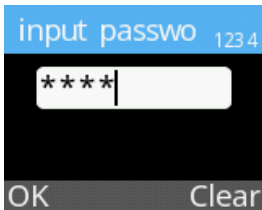

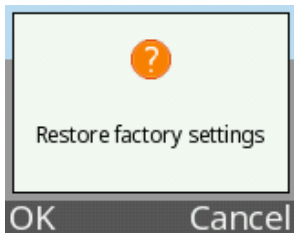


Display settings

 Here you can change Wallpaper, Idle display settings, Brightness, Keypad backlight and lock settings.

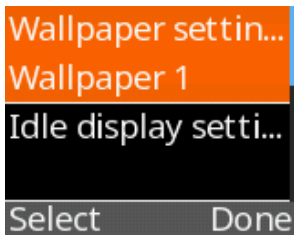

 
1. Wallpaper settings – Change wallpaper to built-in wallpaper, your own photo or video files. Press “OK” on wallpaper settings and choose your desired wallpaper and select “OK”.
2. Idle display settings – Show time & date, SIM card status, today’s schedule, timer, current music and radio station on the home screen. Press the “OK” key on the functions you want to display or not to display.

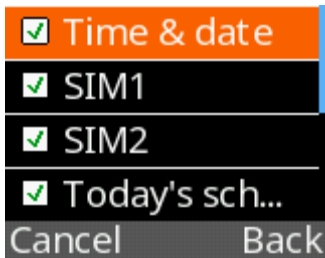

3. Brightness – To adjust the screens brightness, use the left (4) and right (6) cursor keys to increase or decrease the brightness.
4. Keypad backlight time – Change the timeout value of keypad backlight.
5. Auto keypad lock – Lock the keypad after a defined timeout value automatically.

Security

 Here you can change SIM PIN number, enable phone startup password, keypad lock, call and message blacklist settings.


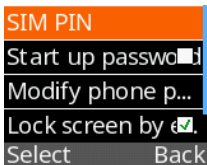


1. SIM PIN – Enable SIM PIN and change the PIN number (default PIN is provided by your network operator), press the “OK” key on SIM PIN to enable SIM PIN. To modify the SIM PIN press the “OK” key on “Modify Pin” and enter the new PIN.
2. Require phone password to startup – Enable phone startup password (default password is **1234**). Input the current phone password to activate password on startup.
3. Modify phone password – To modify the password, press “OK” key on Modify phone password, enter in the current password, and then enter your new password.
4. Lock screen by end-key – Lock the keypad immediately when pressing the red “End-call” key at the home screen.


Blacklist

Blacklist can block unwanted phone numbers from being able to call or message you.

  1. Press the “OK” key on Blacklist. It will then show you all the numbers and contacts that are listed in blacklist.

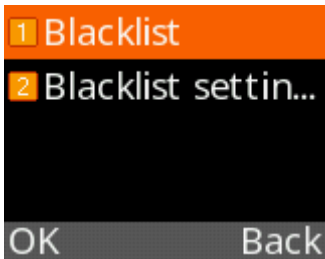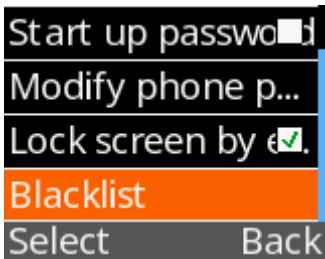


 2. To add new number to the blacklist press “Options” key and select “New” then type in the name and phone number you want to block from calling or messaging you. Then select “Save” to save it to your blacklist.
3. To remove a phone number on the blacklist, highlight it and press “Options” key and select “Delete”
4. Blacklist settings allow you to select whether blocking either voice calls or messages or both.

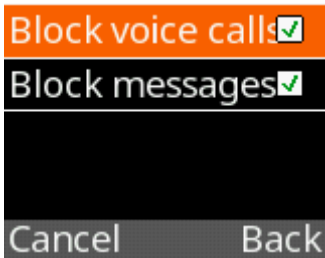



Call settings

 Here you can setup Dual-SIM, call forwarding, call waiting, call barring, caller ID and more.

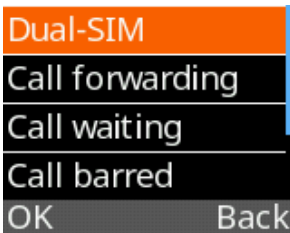

  1. Dual-SIM – When using two SIM cards at the same time, use this menu to configure the Dual-SIM settings, e.g. enable or disable SIM, enable or disable flight mode, reply call or message by the original SIM.

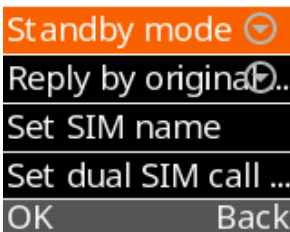

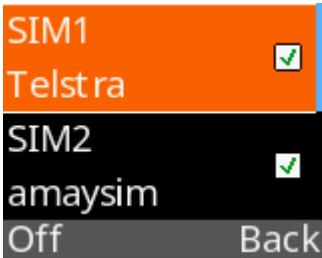

2. Call forwarding – Within call forwarding you can select to always forward calls, forward when busy, forward when unanswered and forward when unreachable. Simply select the options you wish to use and turn them on. You can then choose which number you wish callers to be forwarded to. The default number will be your network providers voicemail service. Press the “OK” key on the call forwarding option and select on or off using the “OK” key.
3. Call waiting – Enable the second caller to call you while you are having an ongoing call. Press the “OK” key on call waiting and select on or cancel using the “OK” key.
4. Call barred – Within call barring you can select to bar certain calls like, all outgoing calls, international outgoing calls, International outgoing home calls, all

 
incoming calls, incoming calls while roaming and cancel all options. Simply select the options you wish to use using the “OK” Key and selecting on or off.

5. Hide Caller ID – Do not show your phone number (caller ID) while making an outgoing call. Select either Hide Caller ID, Display own ID or Display ID set by your network using the “OK” key.
6. Others – Enable call time reminder, auto redial, vibration when connected, reply SMS after rejected call, voice call recording and speak incoming caller’s number. Press the “OK” key on any selection to turn this function on or off.




Networks


Here you can change the APN, turn on/off mobile data service, data roaming, 4G voice (VoLTE), select mobile network and restrict network type.

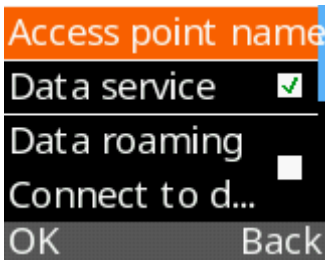

 
1. Access point names (APN) – Configure mobile data service settings
2. Data service – Enable or disable mobile data service
3. Data roaming - Enable or disable roaming mobile data service in overseas
4. Preferred data SIM – Select which SIM card to be used for mobile data service

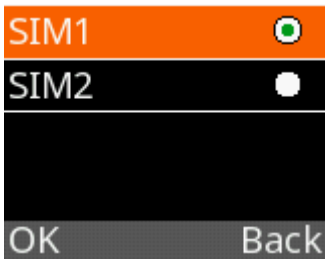

 
5. Network selection – Select available mobile network to connect

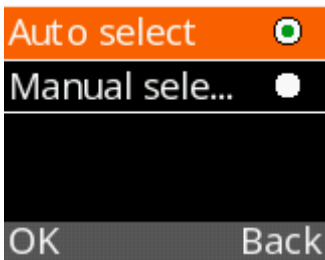

 6. Network type – Select whether to connect to 4G networks

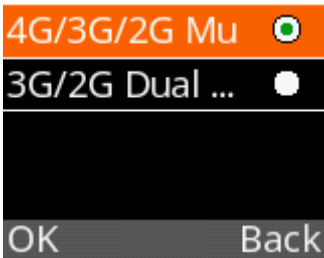

 7. VoLTE calls – Enable 4G voice calls (network dependent)

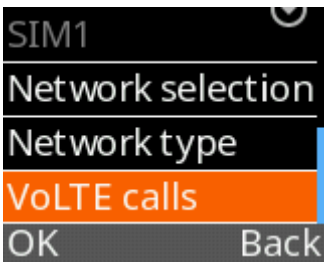

Troubleshooting and support

If you are experiencing difficulties with your phone, please go through the following troubleshoots:

The phone will not power on

1. Ensure the battery is inserted correctly.
2. Ensure you are pressing and holding the power button for at least 5 seconds.
3. Ensure you have charged the phone for at least 10 minutes.

The phone is asking for a PUK code

This means you have input the incorrect SIM PIN code 3 times or more. Contact your network provider to retrieve your PUK code to unlock your phone as only your network provider can help unlock your SIM.

SIM card error or no SIM card

1. Ensure you have inserted the SIM card correctly and are using the correct size SIM card. Follow instructions in the quick set up guide for installing the SIM Card.
2. Your SIM card may be damaged or dirty, ensure you replace your SIM with your network provider if this error occurs.

Failure to connect to the network

1. Your network signal may be weak or out of range. Contact your network provider or try the phone in a different location to check your signal.
2. Your SIM card may be damaged, invalid or has no credit. Contact your network provider for support.

Failure to make an outgoing call

1. Ensure you have entered the correct phone number.
2. Ensure you have enough credit on your provider's account. Contact your network provider for support.

3. Your signal strength may be weak. Check your signal strength and contact your network provider.

Can't hear anyone on the call

1. Ensure your call volume is adjusted to your requirements. Using the volume keys on the right side of the phone.
2. Ensure you have sufficient signal strength.

Cannot receive calls

1. Ensure your mobile phone is switched on.
2. You have enough signal strength to receive calls.
3. Ensure you do not have the phone in flight mode.
4. Ensure your SIM card is installed correctly.

The other party cannot hear you on the call

1. Ensure your hand or fingers are not covering the microphone located at the bottom right of the phone.

2. Ensure you are speaking directly into the microphone.
3. Ensure the other party has their volume turn up to their desired level.

Phone won't charge

1. Ensure the power plug is inserted in the wall socket correctly and the wall switch is turned on.
2. Ensure the wall power socket is working by testing another device or another power socket.
3. Ensure you have inserted the microUSB cable into the phone correctly.
4. Ensure there is no dirt or dust accumulated in the devices power socket.
5. Ensure you have left the phone on charge for at least 10 minutes as the battery may have run out of charge completely.

Phone won't connect via Bluetooth

1. Ensure you have turned on and activated the Bluetooth settings. See Bluetooth guide in manual.

2. Ensure the other device has Bluetooth enabled.
3. Your Bluetooth device may be too far away from the other device to connect. Ensure you are within range of this device to connect.
4. Ensure you follow the Bluetooth instructions above.
5. When connecting the Bluetooth device for the first time, ensure it is in Pairing Mode.



Lite 4G Operator's Manual

How to contact us

Email us at help@opelmobile.com.au or
call  **1300 971 584**

(open 8am to 6pm AEST, Monday to Friday
– not including NSW public holidays)