



TAB R8

Operator's Manual

Model Number: OMR8T25

How to contact us

Email us at help@opelmobile.com or call

1300 971 584 in Australia
(8am to 6pm AEST, Monday to Friday -
not including NSW public holidays)

0800 452 244 in New Zealand
(9am to 5pm NZST, Monday to Friday)

Contents

Safety Information	3
Overview	6
Status Bar Icons.....	7
Navigation Bar.....	8
Specifications	9
Quick setup guide	10
Troubleshooting and support	14

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by 3 Feet Solutions Pty Ltd is under license. Other trademarks and trade names are those of their respective owners.

Google, Android, Google Maps, Gmail and other marks are trademarks of Google LLC.

Safety Information

Read this entire manual carefully before you start using the device. This will take you a few minutes, but it will save you time later and will allow you to enjoy all the features on your device.

How to handle and preserve your device

- Trying to modify, disassemble or repair the device or the charger yourself will make the warranty invalid.
- Avoid hitting or shaking your tablet.
- The warranty of this tablet may be annulled if you use unauthorised accessories. To prevent this from happening and to keep your tablet working properly use only the cable that originally comes with the device.
- Make sure the device does not get wet. To avoid possible, short-circuit, electric shock or corrosion keep your tablet away from rain, water splash, sweat or moisture. You must not use your device with your hands wet or immerse it in water. In case it gets wet keep the tablet OFF and do not try to use a microwave to dry it.
- This product should not be used in extremely hot, cold, dusty or humid spaces. The tablet also should not be exposed to long periods of sunshine or strong magnetic fields.

- Avoid all heat sources, ovens or other appliances (including amplifiers) that produce heat or have hot surfaces.
- Excessive high-volume levels or noise may affect your hearing. To prevent this from happening use an adequate volume in your earphones when you are listening to music or enjoying any of the multimedia features of the tablet.
- High sound pressure is possible and presents a hearing damage risk. Do not listen at high volume levels for long periods.
- You are fully responsible for keeping your information backed up and we don't take any legal responsibility for data that is damaged or lost. It is possible to erase or interfere with the information stored in your tablet by a magnetic device when using your tablet. To avoid this from happening, keep your tablet clear from magnetic devices.
- Pointing the torch into your own or another person's eyes will cause damage and may result in blindness.



Safety recommendations for accessories


- Use only Opel accessories that came with this tablet

- We recommend charging the battery as soon as possible once the tablet has been switched on.
- Immediately stop using the battery charger if you smell an odour or overheats or a crack appears in the casing.
- In case you notice the cable, or the plug have suffered any damage, discontinue using it and contact sales support as soon as possible for advice.

Usage conditions & restrictions

- All packaging materials, especially plastic ones, must be disposed of properly. The lack of this procedure may cause a suffocation danger to children. Any packaging must be kept out of children's reach.
- This device is not a toy and not designed for children and strict adult supervision must always be adhered to. Keep the tablet and accessories beyond children's reach.
- This device can be recycled. To dispose of this device properly remember to follow local regulations. Local authorities may guide you on finding appropriate facilities to this end. The battery must never be disposed of in a fire.
- You are fully responsible for any damage caused by not following these instructions or for improper use of the device. We do not accept any liability for any improper use or mishandling on this device.

Overview

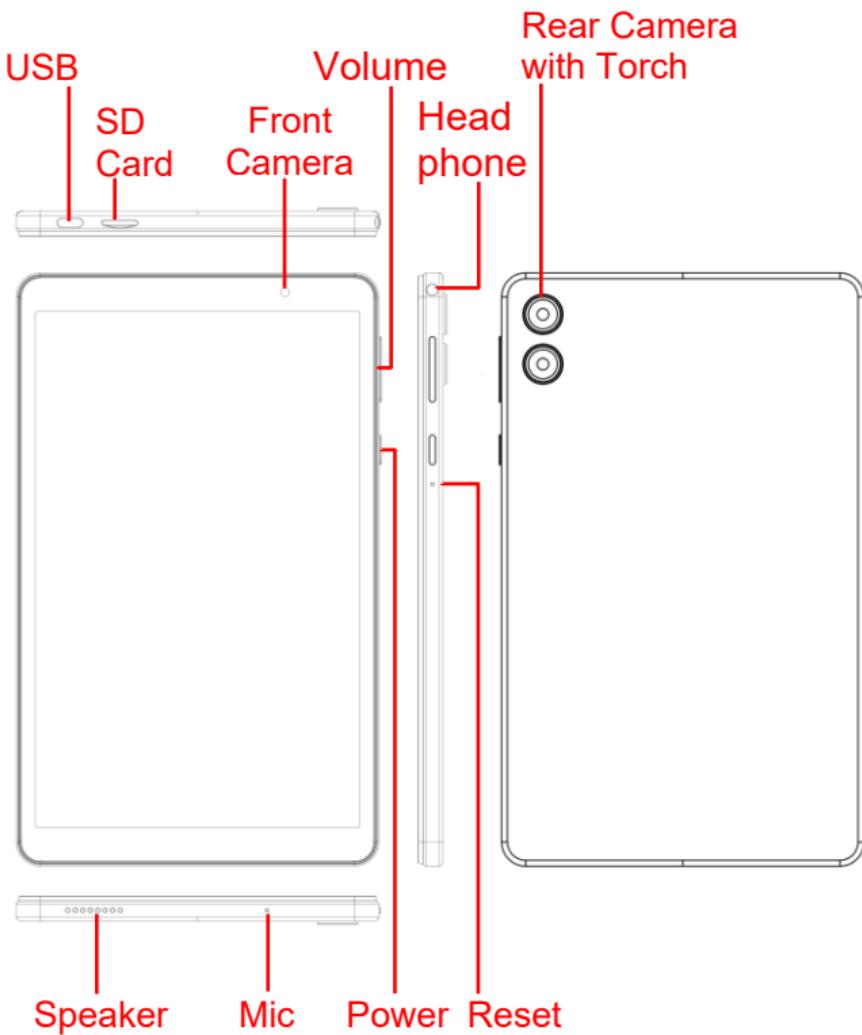

Status Bar Icons

Along the top of your tablet's screen is the status bar. Icons will appear, notifying you of new messages, upcoming calendar events, or something else you should notice. On the right-hand side of the status bar, you'll see the below status icons.

	Alarm is set
	Bluetooth is on
	Wi-Fi connected
	Airplane mode enabled
	Battery gauge
	Battery is charging
	Silent mode enabled
	Do Not Disturb mode enabled

	Location service enabled
	Headphone connected

Navigation Bar

There are three navigation buttons at the bottom of the screen: **Back**, **Home** and **App Switcher**



Go back one step
- tap **Back**



Go to home screen
- tap **Home**



Switch to previous apps
- tap **App Switcher**



Specifications

Model number:	OMR8T25
Dimensions:	199 x 121.6 x 8.45 mm
Weight:	313g
Platform:	Android™ 15
Display:	8 inch / 1280x800 / IPS
Processor:	1.8GHz Cortex A73 x 1 + A53 x 4
Chipset	Allwinner A333
Memory:	4GB + 4GB Virtual RAM
Internal Storage:	64GB on board
External Storage:	MicroSD card up to 512GB
Battery:	Li-Poly 4000mAh
Rear Camera:	5MP AF with torch
Front Camera:	2MP
Wi-Fi:	802.11a/b/g/n/ac/ax, 2.4+5GHz
Bluetooth:	5.4
Input/Output:	USB-C charging port / 3.5mm headphone jack

Quick setup guide

Installing a memory card (optional)

An optional MicroSD memory card up to 512GB can be used as additional device storage. You can store photos, videos, music and more.

1. Make sure the device is turned off.
2. Insert the memory card with the gold contacts facing down until feeling it clicked into place.
3. The device will automatically recognise that a memory card has been inserted.
4. To remove the memory card, gently push it until you feel a click and take it out.

Charging the tablet

Connect the charger to the tablet by inserting the USB-C cable into the USB-C port in the tablet and connecting the power adaptor to a wall socket.

Please note: Charge the tablet to 100% before use, to prolong the battery life.

Turning the tablet on and off

1. To power the device on simply hold down the power key for 5 seconds. There will be a short delay of a few minutes the first time the tablet starts.
2. To turn the device off, simply press both the volume up and power buttons at the same time, it will then bring up the pop-up menu for you to select, Power off or Restart the device.

Using the tablet for the first time

After charging, turn the tablet on by holding down the power button for 5 seconds. There will be a short delay of a few minutes the first time the tablet starts.

The tablet will then guide you through to set it up initially by asking you some questions.

1. **Hello** – select Language and tap Start
2. **Connect to Wi-Fi** – select a wireless network for downloading data (tap Set up offline if no Wi-Fi is available)
3. **Copy apps and data** – you can choose to transfer apps and data from a previous device or cloud storage (tap Don't copy if you want to setup it as a new device)
4. **Who's going to use this device?** – select A child if you want to setup Google Kids Space for children, otherwise select An adult or a teenager

5. **Google Sign in** – use your Google / Gmail Account to sign in or create a new account (tap Skip if you prefer not to use sign in now)
6. **Set a secured screen lock** – by using a PIN, Password or Pattern (tap Skip if you don't want to create a PIN/password)
7. **Google services** – select whether you want enable "Use location", "Allow Wi-Fi/Bluetooth scanning", and "Send usage and diagnostic data" to Google
8. **Back up your device** – you can choose data to back up to your Google Account storage (tap Don't back up if you want to turn this off)
9. **Let contacts nearby find and share with you** – enable Quick Share to allow your contacts discover your device and share with you when they're nearby
10. **Meet Google Gemini, the personal AI assistant** – you can hold down the power button to talk to Gemini even when your device is on lock screen

Google Gemini is an AI-powered chatbot that can understand and respond to text, images, and audio prompts. It's capable of answering questions, generating various forms of content, creating code, producing images, and more.

11. **Use Google Gemini hands-free with "Hey Google"** – enable the device to wait in standby mode to detect "Hey Google" voice command
12. **Anything else?** – you can add additional email accounts if needed, change font size, or change wallpaper here (tap No thanks to skip them now)

Sleep/standby mode

1. To place the tablet into sleep/standby mode press the power button once – this will turn off the screen and put the tablet to sleep
2. To wake up the tablet, simply press the power button once, then swipe your finger up on the screen to unlock the device. If you have setup a PIN or password, type it in to access the device

Troubleshooting and support

If you are experiencing difficulties with your tablet, please go through the following troubleshoots

Tablet will not power on:

1. Ensure you are pressing and holding the power button for at least 5 seconds.
2. Ensure you have charged the tablet for at least 20 minutes.

Tablet won't charge:

1. Ensure the power plug is inserted in the wall socket correctly and the wall switch is turned on
2. Ensure the wall power socket is working by testing another device or a separate power socket
3. Ensure you have inserted the USB-C cable into the tablet correctly
4. Ensure there is no dirt or dust accumulated in the devices power socket
5. Ensure you have left the tablet on charge for at least 10 minutes as the battery may have run out of charge completely

Tablet won't connect via Bluetooth:

1. Ensure you have turned on and activated the Bluetooth settings. See Bluetooth guide in manual.
2. Ensure the other device has Bluetooth enabled
3. Your Bluetooth device may be too far away from the other device to connect. Ensure you are within range of this device to connect
4. Ensure you follow the Bluetooth instructions above
5. If you connect to your Bluetooth device for the first time, ensure it is in Pairing Mode during pairing

Tablet won't connect to Wi-Fi:

1. Ensure you have turned on and activated Wi-Fi on your device. See Wi-Fi guide in the manual.
2. Ensure the Wi-Fi you are connecting to is working.
3. Your device may be too far away from the Wi-Fi Router. Ensure you are within range of this device to connect.



TAB R8 Operator's Manual

Model Number: OMR8T25

How to contact us

Email us at **help@opelmobile.com** or call

1300 971 584 in Australia
(8am to 6pm AEST, Monday to Friday -
not including NSW public holidays)

0800 452 244 in New Zealand
(9am to 5pm NZST, Monday to Friday)