

LITE

Flip

OPERATOR'S MANUAL

How to contact us

Email us at help@3feetsolutions.com.au or call



-  **1300 971 584** in Australia (Open 8am to 6pm AEST, Monday to Friday - not including NSW public holidays)
-  **0800 452 244** in New Zealand (Open 10am to 6pm NZST, Monday to Friday - not including N.Z. nor Australian public holidays)

Table of Contents

Safety Information.....	6
What's in the Box.....	23
Specifications	24
Quick Setup Guide.....	25
Overview of the Phone.....	34
Phone Status Icons.....	36
Quick User Guide	39
Predictive text.....	42
Symbols (except 123 mode).....	43
Main Interface.....	44
M1 / M2 Quick Dial	45
Speed Dial.....	46
Phone Contacts.....	48
Call Logs	52

Messages.....	54
Sound Profiles	58
Clock.....	59
Torch	63
Tools.....	64
Settings.....	67
Troubleshooting and support.....	71

RF Warning Statement

This product complies with the radio interference requirements of the European Community.

Product name: **LITE Flip**

Product model: **LF26xxEU**

Frequency Range:

EGSM900: 880-915MHz; DCS1800: 1710-1785MHz; WCDMA 2100: 1920-1980MHz; WCDMA 900: 880-915MHz; LTE Band 1: 1920-1980MHz; LTE Band 3: 1710-1785MHz; **LTE Band 5: xxxx** LTE Band 7: 2500-2570MHz; LTE Band 8: 880-915 MHz; LTE Band 20: 832-862MHz; LTE Band 28A: 703-733MHz; LTE Band 28B: 718-748MHz ; LTE Band 40: 2300-2400MHz; **LTE Band 41: xxxx** Bluetooth: 2402-2480MHz; Wi-Fi (2.4GHz): 2412-2472MHz/2422-2462MHz

Max. Transmit Power:

EGSM 900: 31.94dBm; DCS1800: 29.36dBm; WCDMA 2100:22.10 dBm; WCDMA 900: 22.52 dBm; LTE Band 1:22.27 dBm; LTE Band 3: 23.35 dBm; **LTE Band 5: xxxx**, LTE Band 7: 23.39 dBm; LTE Band 8:23.07 dBm; LTE Band 20: 23.18 dBm; LTE Band 28A: 22.70 dBm; LTE Band 28B:

23.57 dBm; LTE Band 40: 23.04 dBm; LTE Band 41: xxxx; Bluetooth: 8.35dBm

EU/UK Declaration of Conformity

The EU declaration of conformity referred to in Article 10(9) shall be provided as follows:

Hereby, 3 Feet Solutions Pty Ltd declares that radio equipment type LCB26xx is in compliance with Directive 2014/53/EU, and this product is allowed to be used in all EU member states.

The full text of the EU/UK declaration of conformity and PSTI UK statement of compliance are available at: <https://www.opelmobile.com/dofc>

There are no countries with restricted usage.

The device is restricted to indoor use only when operating in the 5150~5350MHz frequency range.

Caution: Risk of explosion if battery is replaced by an incorrect type. Dispose of used batteries according to the instructions.

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by 3 Feet

Solutions Pty Ltd is under license. Other trademarks and trade names are those of their respective owners.

Safety Information

Welcome to LITE and thanks for purchasing our products. For the best performance, we recommend you read this manual carefully, especially the "safety instructions". This will take you a few minutes, but it will save you time later and will allow you to enjoy all the features on your device.

THIS MODEL MEETS INTERNATIONAL GUIDELINES FOR EXPOSURE TO RADIO WAVES

Your mobile device is a radio transmitter and receiver. It is designed not to exceed the limits for

exposure to radio waves recommended by international guidelines. These guidelines were developed by the independent scientific organization ICNIRP and include safety margins designed to assure the protection of all persons, regardless of age and health.

The guidelines use a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit for mobile devices is 2 W/kg and the highest SAR value for this device when tested at the ear was 0.364 W/kg*. As mobile devices offer a range of functions, they can be used in other positions, such as on the body as described in this user guide**. In this case, the highest tested SAR value is 1.601 W/kg*.

As SAR is measured utilizing the device's highest transmitting power

the actual SAR of this device while operating is typically below that indicated above. This is due to automatic changes to the power level of the device to ensure it only uses the minimum level required to reach the network.

The World Health Organization has stated that present scientific information does not indicate the need for any special precautions for the use of mobile devices. They note that if you want to reduce your exposure then you can do so by limiting the length of calls or using a 'hands-free' device to keep the mobile phone away from the head and body.

Additional Information can be found on the website of the World Health Organization.

**The tests are carried out in accordance with international guidelines for testing.*

***For body worn operation, this phone has been tested and meets the RF exposure guidelines when used with the LITE accessories supplied or designated for this product. Use of other accessories may not ensure compliance with RF exposure guidelines*

How to handle and preserve your device?

- Trying to modify, disassemble or repair the device or the charger yourself incorrectly may make the warranty invalid. Only certified repairers should install or repair device equipment.

- Avoid hitting or shaking your phone.
- The warranty of this phone may be annulled if you use unauthorised accessories. To prevent this from happening and to keep your phone working properly use only the battery and USB cable that originally comes with the device.
- Make sure the device does not get wet. To avoid possible short-circuit, electric shock or corrosion, keep your device dry. In case it gets wet keep the phone off and do not try to use a microwave to dry it.
- Do not use your device when entering areas that are near flammable liquids.

- Observe all local laws and regulations on the use of mobile phones. Turn off the device before entering petrol stations, oil refineries or chemical plants.
- This product should not be used in extremely hot, cold, dusty or humid spaces. It also should not be exposed to long periods of sunshine or strong magnetic fields.
- If you have a pacemaker keep the phone at least a 20cm distance from the place it is located. This phone may cause interference to some hearing aids and other electronic devices.
- Avoid all heat sources, ovens or other appliances (including amplifiers) that produce heat or have hot surfaces.

- Switch off the device when entering an aircraft.
- Do not use a hand-held device when operating any motor vehicles, heavy equipment or moving objects.
- Excessive high-volume levels or noise may affect your hearing. To prevent this from happening use an adequate volume in your earphones when you are listening to music or employing any of the multimedia features on the device.
- High sound pressure is possible and presents a hearing damage risk. Do not listen at high volume levels for long periods.
- You are fully responsible for keeping your information



backed up and we do not take any legal responsibility for data that is damaged or lost. It is possible to erase or interfere with the information stored in your phone by a magnetic device when using your phone. To avoid this issue, keep your phone clear from magnetic devices.

- Pointing the torch into your own or another person's eyes will cause damage and may result in blindness.

Safety recommendations for accessories

- Use only LITE accessories that come with this phone.

- Be careful when handling the battery. The lithium-ion battery can be put into use immediately after being unpacked. Use only the LITE battery that came with the device. We recommend charging the battery as soon as possible once the phone has been switched on.
- **CAUTION: RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE. ENSURE YOU ALWAYS ONLY USE THE LITE BATTERY THAT IS SPECIFIED FOR THIS DEVICE. DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS.**
- Immediately stop using the battery charger if you smell an odour or overheating or a crack

or swelling appears in the casing.

- In case you notice the cable, or the plug have suffered any damage, discontinue using it and contact LITE support line as soon as possible for advice.

Usage conditions and restrictions

- All packaging materials, especially plastic ones, must be disposed of properly. The lack of this procedure may cause a suffocation danger to children. Any packaging must be kept out of children's reach.
- This device is not a toy and not designed for children and strict adult supervision must be

adhered to at all times. Keep the phone and the accessories beyond children's reach.

- This device can be recycled. To dispose of this device properly remember to follow local regulations. Local authorities may guide you on finding appropriate facilities to this end. The battery must never be disposed of in a fire.
- If this phone is lost or has been stolen, please notify your network service provider as soon as possible and ask for the SIM card to be deactivated.
- You are fully responsible for any damage caused by not following these instructions or for improper use of the device. We do not accept any liability for any

improper use or mishandling on this device.

WEEE (Waste Electrical & Electronic Equipment)

(Applicable in countries with separate collection systems)

Disposal of this product and its batteries

The symbol indicates that this product shall not be mixed with unsorted municipal waste when disposed of. There is a separate collection system for WEEE. For further information please contact your local government office or the retailer from which you purchased the product. Correct disposal ensures that WEEE is recycled and reused appropriately. It helps avoid



potential damage to the environment and human health and to preserve natural resources.

If batteries are not properly disposed of, their chemical substances can cause harm to human health or the environment. To protect the environment and to promote material reuse, please separate batteries from other types of waste and recycle them through your local, free battery return system.

Battery care

Rechargeable batteries are consumable components that become less effective as they age. Maintaining a healthy battery is crucial for the longevity and performance of your device.

Impacts on battery lifetime

The primary enemies of a battery are elevated temperatures and suboptimal charging patterns.

- **Heat Exposure:** Exposure to high temperatures, like leaving the device in a hot car or direct sunlight, accelerates chemical degradation within the battery, permanently reducing its capacity.
- **Charging Patterns:** Keeping the battery charge consistently at 100% or letting it repeatedly drain to 0% can stress the battery. For optimal long-term battery health, it is suggested to keep the charge level between 20% and 80%.

Power consumption and settings

Switching off unused radio connections like Bluetooth, Wi-Fi and cellular data when not needed can lead to noticeable power savings. Even when not actively transferring data, these radios consume power by constantly scanning for available networks or devices.

The screen brightness is typically the single largest consumer of power. Reducing the brightness or enabling auto-brightness can extend the battery's runtime. Similarly, features like an always-on display continuously light up a portion of the screen and contribute to power drain over time, so disabling it can help.

Extending battery lifetime

To maximize your battery's lifespan and runtime, adopt a few best practices. For longevity, primarily focus on thermal management by avoiding extreme heat or cold, and maintaining the charge level between the 20% and 80% range to reduce the chemical stress on the battery. For daily runtime, actively manage power-hungry features:

- Reduce screen brightness
- Switch off unused radio connections
- Turn on battery protection setting (if any)
- Activate power saver mode (if any)
- Keep software updated

Maintaining water and dust protection

This device can reach the IP rating standard IP54.

This device is not water-resistant nor dust-resistant. The device may be damaged if water or dust enters it. Ensure the battery cover is closed securely before using.

- Do not expose to any liquid.
- The USB cable and charging cradle are not water-resistant. Do not touch them with wet hands.

What's in the Box

1. **Lite FLIP** mobile phone
2. Rechargeable battery
3. USB cable
4. Instruction manual
5. Warranty Card

Specifications

Model number	LF26
Dimension	103.5 x 53x 19.5 mm
Weight	95.7g (including battery)
Platform	RTOS
Display	Internal: 2.4" 240x320 External: 1.77" 128x160
LCD panel	TFT
Chipset	Unisoc T107
Internal storage	128 MB
External storage	microSD card up to 512 GB
Camera	0.3 MP
Battery	1350 mAh Li-Ion
Power input	5V0.55A USB-C in
Input/Output	USB-C charging port / 3.5mm headphone jack
Network bands	2G: 900/1800 3G: 900/2100 4G: B1/3/5/7/8/20/28AB/40/41
SIM card slot	2 x Nano SIM
VoLTE call	Yes
Bluetooth	4.2
Waterproof and dustproof	IP54
GPS	No
HAC	No

Quick Setup Guide

 
1. Unpack all the contents out of the packaging and have your SIM card ready to insert into the phone.

(Please note this phone supports Nano SIM card, if you do not have Nano SIM card please contact your SIM card provider as they will be able to supply one for you)

Make sure your device is turned off.

2. Firmly hold the device in one hand, using your thumb lift off the cover starting from the bottom left when looking at the back of the phone. The cover will then click off. (Please note


you may need to use your fingernail to lift off the cover)

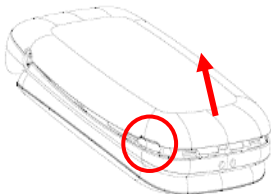


Lift from this corner first, using your thumb or fingernail to remove the cover

3. Remove the battery from the phone by lifting from the bottom and pulling out.

 (Skip this step if the battery is not inserted into the phone)

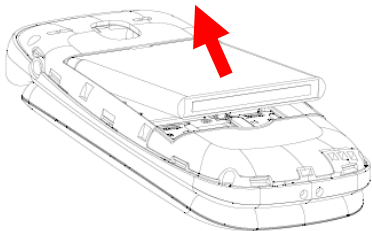


 4. Slide your SIM card into the SIM tray (**sliding in until it does not go in any further**), ensure the gold plates are facing downwards. Ensure the SIM1 cornered edge is at the bottom left corner and SIM2 cornered edge is at the top right corner.

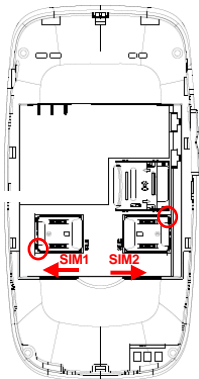


5. If you wish to use an optional MicroSD card for extra phone storage, insert it into the MicroSD/TF card slot. Gently slide the metal hinged compartment cover in the Open direction until you feel or hear a small click, and the cover can swing open. Place the MicroSD

 card into the open compartment or slot. Ensure the gold-plates contacts are facing downwards. Gently slide the cover in the Lock direction. **(PLEASE NOTE: supports up to 512GB MicroSD card only)**

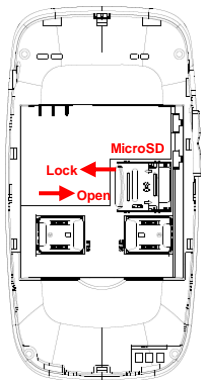

 6. Re-insert the battery back into the phone. Ensuring the gold plates on the battery and the phone are aligned.
7. Replace the back cover by sliding and pushing your fingers across the edges of the back cover to ensure it has

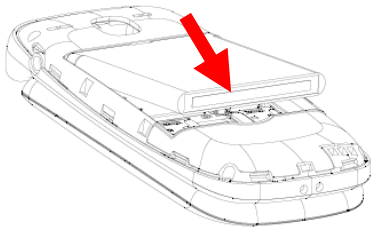

completely clicked back into place.

8. Replace the back cover by sliding and pushing your

fingers across the edges of the back cover to ensure it has completely clicked back into place.

9. Charge the phone by plugging in the USB Type-C cable into the phone's charging port located on the left-hand side of the phone.

Charging the phone

Connect the charger to the phone by inserting the USB-C cable into the USB-C port in the phone and connecting the power adaptor to a wall socket.

Please note: Power adaptor is not included in the box.

Rechargeable batteries are consumable components that become less effective as they age. When charging the phone for the first time, it will prompt a recommendation to limit the charging to 80% capacity to optimize the battery lifespan.

Setting up a phone password

When turning on the device for the first time, it will prompt you to create a phone password for added security.

Once the phone password is created, it will be used when restarting the device or restoring factory settings.

Please note: It is impossible to recover a lost phone password.

Press “Skip” if you do not want to create a phone password.

Turning the phone on and off

1. To turn the phone on, long press the power button for 5 seconds. If your SIM card is inserted and active, the time and date will be automatically set based on your location.
2. To turn the phone off, long press the power button for 5 seconds.






Overview of the Phone











1	Menu / Left soft key
2	Answer / Call key
3	Quick Dial M1 / Left navigation key
4	+ symbol for international calls
5	Earpiece
6	Write new message / Up navigation key
7	Speed Dial Numbers/ Down navigation key
8	Contacts / Right soft key
9	End call / Power on/off key
10	Quick Dial M2 / Right navigation key
11	Camera / OK key
12	Silent / Meeting mode (press and hold)
13	Torch (press and hold)
14	Camera
15	LED Torch
16	External screen
17	3.5mm headphone jack
18	USB charging port
19	Volume up button
20	Volume down button

Phone Status Icons

Note: Icons are only for demonstration; they may differ on the actual device.

Icons	Descriptions
	Battery capacity
	Network signal strength
	VoLTE (4G Voice) service is activated
	Connected to roaming mobile network
	No SIM card is inserted

	Memory card is inserted
	Unread SMS or MMS
	Missed calls
	Call forwarding is activated
	HD Voice is enabled for current call
	Earphone is connected
	Silent mode is on
	Vibrate mode is on

	Bluetooth® is on
	FM radio
	MP3 music player
	LED Torch
	Alarm is set
	Flight mode is on

Quick User Guide

Answer a call

1. To answer an incoming call, simply flip open the phone and the call will be answered. You can turn off the flip to answer function in the settings menu. If this is turned off, to answer a call press the green "Answer" key.

Reject and silence a call

2. To reject an incoming call, press and hold the volume up or down button for 5 seconds. If your phone is flipped open you are able to reject a call by pressing the red Hang up/Power key once.

3. To silence an incoming call, press the volume button once, if your phone is flipped open you can still press the volume button once or “Silent” softkey.

Dialling and using keypad numbers (123 mode)

1. To dial a phone number, press the numbers on the keypad then press the green “Answer” key to dial.
2. To type numbers while creating a contact or writing a message, press the “Hash” # key until “123” mode is highlighted then press the “OK” key.

Typing Letters (en/En/EN/Abc/abc/ABC modes)

1. To type in letters, press the “Hash” # key to choose between En, en, EN, Abc, abc, ABC modes, once the mode you desire is highlighted then press the “OK” key.
2. En, en and EN are predictive text modes with capital first letter, small letters or all capitals, respectively.
3. Abc, abc and ABC are standard text modes. E.g. To type the letter “c”, press the “2 ABC” key 3 times until the letter “c” comes up.

Predictive text

Predictive text (En/en/EN modes) is a smart way to type messages. This feature can make typing easier by suggesting words based on what you are typing.

1. To use predictive text, press the “Hash” # key and select “En, en or EN”, then use the keypad to type the word without pressing the same key multiple times. E.g. To type “hello”, simply press the “4, 3, 5, 5, 6” keys once and the word “hello” will show up for selection. It also suggests other word options similar to what has been typed in.

2. To choose another candidate word, use the M1 (Left) and M2 (Right) cursor keys to highlight it and then press “OK” key.

Symbols (except 123 mode)

1. To add symbols like dot, comma, question mark, etc., press the “Star” * key and scroll using the up/down cursor key and the M1 (Left) and M2 (Right) keys to choose the symbol you wish to use.
2. Confirm your selection with the left soft key or “OK” key.

Main Interface

Main Menu

You can access to Messages, Contacts, Call logs, Sound profiles, Clock, Torch, Tools and Settings by pressing the left soft key from the main home screen.

You can press the red Hang up/Power key to go back to the home screen.

Notifications – Missed Calls and Unread Messages

Notifications will be displayed on the front cover of the phone and/or displayed on the main screen. You can review the details of the missed call or messages via the main menu

and select the item for more information.

M1 / M2 Quick Dial

Quick Dial is a quick and easy way to call the people that you may contact on a regular basis. Two contact shortcuts can be added to Quick Dial.

1. Press left soft key to get into the phone menu and go to the Settings.
2. Select "M1/M2 Quick Dial".
3. Add contacts to M1 and M2 by either manually typing in the phone numbers or choosing an existing contact. Press the left soft key to get to your

contacts, then select the contact or searching for a specific name.

4. To call any of your Quick Dial contacts, press the M1 or M2 key from the home screen, it will then dial that contact.

Speed Dial

Speed Dial is a quick and easy way to call the people that you may contact on a regular basis. Up to 8 contact shortcuts can be added to Speed Dial.

1. To set up Speed Dial, press the down cursor key at the main home screen to get into the Speed Dial menu.
2. Select the speed dial number you want to setup a speed dial

contact, select options then edit. You can now type in a phone number manually or choose an existing contact from your contacts list.

3. To remove a phone number from speed dial, select the speed dial contact, press left soft key for "Options" and scroll down to Delete option and press OK to delete.
4. To call any of your Speed Dial contacts, press and hold down the respective keypad number associate to the contact from the main home screen for 3 seconds to automatically call the number.

Phone Contacts

To access phone contacts, press the left soft key from the main home screen and scroll down to Contacts or through the right soft key for “Contacts” from phone main menu.

Add a contact

1. Press left soft key for “Options” and select “New contact” from the options.
2. Choose “Phone” or “SIM” memory to save this contact
3. Select the “Name” or “Mobile” or “Home number” and press OK key to enter the information of your contact.

4. Press left soft key to save the contact.

Edit a contact

1. Select the contact you wish to edit and press OK key.
2. Press left soft key for “Options” and select “Edit” from the menu.
3. Select the contact’s name or phone number you wish to edit and press OK key to edit. Press OK key after editing.
4. Press left soft key to save the contact.

Delete contacts

1. Select the contact you wish to delete and press left soft key

for “Options” and select “Delete” from the menu.

2. Press “OK” key to confirm.

Search contacts

1. Press any number on the keypad to access the search menu.
2. Type in the name of the contact you wish to find and the list of contacts matching with the letters you typed in will appear.

Call a contact

1. Select the contact you wish to call.
2. Press the “Call” key.

Send message to a contact

1. Select the contact you wish to send a message to.
2. Press left soft key for “Options” and select “Write Message” from the option.
3. Press OK to type in your message.

Press left soft key for “Options” and select “Send” to send the message.

Blacklist contact

1. Select the contact you wish to add to the blacklist.
2. Press left soft key for “Options” and select “Add to blacklist”,

Call Logs

To access call logs including dialled calls, received calls, missed calls and rejected calls, press the left soft key from the main home screen and scroll down to Call Logs.

To view different types of call history, scroll down to select a call log and press the “OK” key to view that call log.

Call a call log entry

1. Select the contact or number and press the “Call” key, or press left soft key for “Options” and select “Call” from the options.

Send message to a call log entry

1. Select the contact or number and press left soft key for “Options” and select “Write Message” from the option.
2. Select to send an SMS or MMS.

Add call log number to contacts

1. Select the call log number press left soft key for “Options” and select “Add to contacts”.
2. Choose to add as a new contact or to an existing contact.
3. Select to save the contact to the SIM card or Phone.

Add call log number to blacklist

1. Select the call log number
press left soft key for “Options”
and select “Add to blacklist”.

Delete call log entries

1. Select the call log number
press left soft key for “Options”
and select “Delete”.
2. You can also delete all call
logs from the main Call Logs
screen by selecting “Delete
all”.

Messages

To access text and multimedia messages, press the left soft key

from the main home screen and scroll down to Messages.

Create a new message

1. Select “Write message” and press “OK”. Alternatively, you can press the up cursor key from the main home screen.
2. In the “Type name or number” box, type in a phone number or press “OK” key to choose a contact from contact list you wish to send the message to.
3. Press the down key to “Type test message” box and type the message using the keypad.
4. Press left soft key for “Options” and select “Send” to send the

message. You can also send the message by pressing the “OK” key while in text message box.

5. To change the keypad text mode, press the “#” key and choose between En, en, EN, Abc, abc, ABC and 123 modes using the up/down cursor.

Attach a media file/quick response to a message

When creating a message, you can attach a quick response, image, video or audio file to this message.

1. Press left soft key for “Options” and select “Add” from the options.
2. Select item you wish to attach

Read a message

1. Select “Inbox” and select the message you want to read then press the “OK” key.
2. Use the up or down cursor keys to read through the message of a conversation.

Reply to a message

1. Select the message you want to reply to.
2. Press left soft key for “Options” and select “Reply”.

Delete or forward a message, or save the media file attachment

1. Select the message you want to delete, forward or save.

2. Press left soft key for “Options” and select the actions from the options.

Add new, edit, or delete Quick Responses

1. From Messages menu, scroll down and select Quick responses.
2. Select the existing quick response message to edit or delete.
3. Select <Empty> list to add new quick response message.

Sound Profiles

To access Sound Profiles, press the left soft key from the main home

screen and scroll down to Sound Profiles.

You can select the sound profiles based on your preferences.

Edit default profiles

1. Select the profile you wish to edit.
2. Press left soft key for “Options” and select “Edit ringtones”.
3. You can now change Profile, Profile name, Ringtones, Sound volume, Ringtone mode and Other alert settings.

Clock

To access the Alarm, World clock, Timer and Stopwatch, press the left

soft key from the main home screen and scroll down to Clock.

Use Left/Right cursor keys to select Alarm, World clock, Stopwatch and Timer.

Alarm

1. Scroll across to alarm clock to set alarms. Up to 3 alarms can be saved.
2. To turn on or off the alarm, select the alarm and press left soft key to on or off the alarm.
3. To edit the alarm, press the OK key. You can change the alarm name, time, tone and repeat mode.

World Clock

1. Scroll across to World Clock to add and view the city time.
2. To add a new city, press left soft key for “Options” and select “Add city” to add new city from the list.
3. To delete a city from your world clock list, press left soft key for “Options” and select “Delete city” and select the cities you wish to delete. Press left soft key to confirm deletion.

To setup Daylight Saving of a city on your world clock list, press left soft key for “Options” and select “Set Daylight Saving”, select the cities you wish to set. Press left soft key to confirm.

Stop watch

1. Scroll across to Stopwatch.
2. Press left soft key to begin the stopwatch. Press OK/Count key to add lap times.
3. You can pause the timer and start again by pressing the left soft key.
4. To reset the stop watch completely, stop the stop watch timer then press OK/Reset key to reset.

Timer

1. Scroll across to Timer
2. Enter the time you wish to count down. For example, to set a 1 Minute timer, enter 0, 0, 0, 1.

3. Press “OK” key to start timer. An alarm will sound once the timer is up.
4. Press left soft key to stop the timer.

Torch

To access Torch, press the left soft key from the main home screen and scroll down to Torch.

1. Press “OK” key to turn it On and Off.
2. You can also access the Torch function via the keypad by pressing and holding the “0” key for 3 seconds to turn it on or off.

Tools

There are many other tools available such as camera, gallery viewer, video viewer, music player, FM radio, sound recorder, calendar, calculator and file manager.

To access the tools, press the left soft key from the main home screen and scroll down to Tools.

Camera

The camera tool allows you to take photos or record videos. You can also access the camera by pressing the "OK" key from main home screen. There are camera options such as flash light, resolution, night mode, auto timer, brightness,

exposure, white balance and colour filter that you can change to your preferences.

Gallery

The gallery viewer tool allows you to view photos captured and saved.

Video

The video viewer tool allows you to view video recorded. You can play, pause, forward and rewind the video.

Music

The music player tool allows you to play and listen to music file or any recorded audio from your phone storage or from the SD Card storage.

Calendar

The calendar tool allows you set events and reminders. You can view the event or reminder details or you can also view all events or reminders you have set. An alarm will sound once the scheduled time for the event or reminder is reached.

Calculator

The calculator tool allows you to perform basic arithmetic such as addition, subtraction, multiplication, and division.

File Manager

The file manager tool allows you to organize and manage files stored on your device or SD Card.

FM Radio

The FM radio tool allows you to listen to live radio broadcasts using the built-in FM tuner. You need to tune to the radio channel to listen to the radio station.

Sound recorder

The sound recorder tool allows you to record audio using the built-in microphone. You can select the file format of the audio to record and the storage location of the audio file.

Settings

Settings menu allows you to adjust most of the phone settings such as Quick Dial Keys (M1 and M2),

Bluetooth, Phone settings (Time & date, Shortcuts, Auto power on/off, Restore factory settings), Display settings (e.g. Wallpaper, Brightness), Sound profiles (Ringtones, Sound volume, Other tone settings), Security (SIM PIN, Phone password, Blacklist), Call settings and Networks.

M1/M2 Quick Dial

Quick Dial is a quick and easy way to call the people that you may contact on a regular basis. Two contact shortcuts can be added to Quick Dial. See Quick Dial instructions above.

Bluetooth

Bluetooth settings allow you to turn on/off the Bluetooth and pair to a

device. Please note: Some devices will require passwords to connect, ensure you read the instructions on the other device to connect via Bluetooth. **TIP:** some Bluetooth passwords are 1234 or 0000.

Phone settings

Phone settings allow you to change Date & time, Language, Shortcuts, Auto power on/off and Restore factory settings. **Please note:** if you restore your device all information saved on this phone will be permanently deleted.

Display settings

Display settings allow you to change Wallpaper, Idle Screen Display, Brightness and Backlight settings.

Security

Security settings allow you to change SIM PIN number, enable phone startup password, call and message blacklist settings. **Please note:** It is impossible to recover a lost phone startup password.

Call settings

Security settings allow you to setup flip to answer, call forwarding, call barring, caller ID and call waiting settings.

Networks

Networks settings allow you to change Access Point (APN), turn on or off data roaming, 4G voice (VoLTE), select mobile network and restrict network type.

Troubleshooting and support

If you are experiencing difficulties with your mobile phone, please go through the following troubleshoots:

The phone will not power on

1. Ensure the battery is inserted correctly.
2. Ensure you are pressing and holding the power button for 5 seconds.
3. Ensure you have charged the phone for at least 10 minutes.

SIM card error or no SIM card

1. Ensure you have inserted the SIM card correctly and are using the correct size SIM card. Follow instructions in the quick set up guide for installing the SIM Card.
2. Your SIM card may be damaged or dirty, ensure you replace your SIM with your network provider if this error occurs.

The phone is asking for a PUK code

This means you have input the incorrect SIM PIN code 3 times or more. Contact your network provider to retrieve your PUK code to unlock your phone as only your network provider can help unlock your SIM.

Failure to connect to the network

1. Your network signal may be weak or out of range. Contact your network provider or try the phone in a different location to check your signal.
2. Your SIM card may be damaged, invalid or has no credit. Contact your network provider for support.
3. Ensure you have enough credit on your network provider's account. Contact your network provider for support.

Failure to make outgoing call

1. Ensure you have entered the correct phone number.
2. Ensure you have enough credit on your provider's account. Contact your network provider for support.
3. Your signal strength may be weak. Check your signal strength and contact your network provider.

Can't receive calls

1. Ensure your mobile phone is switched on.
2. Ensure you have enough signal strength to receive calls.
3. Ensure you do not have the phone in flight mode.

4. Ensure your SIM card is installed correctly.

Can't hear anyone on the call

1. Ensure your call volume is adjusted to your requirements. Using the volume keys on the right side of the phone.
2. Ensure you have sufficient signal strength.

The other party cannot hear you on the call

1. Ensure your hand or fingers are not covering the microphone located at the bottom right of the phone.
2. Ensure you are speaking directly into the microphone.

3. Ensure you have not muted the call.
4. Ensure the other party has their volume turn up to their desired level.

Phone won't charge

1. Ensure the power plug is inserted in the wall socket correctly and the wall switch is turned on.
2. Ensure the wall power socket is working by testing another device or another power socket.
3. Ensure you have inserted the USB Type-C cable into the phone correctly.

4. Ensure there is no dirt or dust accumulated in the devices power socket.
5. Ensure you have left the phone on charge for at least 10 minutes as the battery may have run out of charge completely.

Phone won't connect via Bluetooth

1. Ensure you have turned on and activated the Bluetooth settings. See Bluetooth guide in manual.
2. Ensure the other device has Bluetooth enabled.
3. Your Bluetooth device may be too far away from the other device to connect. Ensure you


are within range of this device
to connect.

LITE

Flip Operator's Manual

How to contact us

Email us at help@3feetsolutions.com.au or call

-  **1300 971 584** in Australia (Open 8am to 6pm AEST, Monday to Friday - not including NSW public holidays)
-  **0800 452 244** in New Zealand (Open 10am to 6pm NZST, Monday to Friday - not including N.Z. nor Australian public holidays)